STERN

ELECTRONICS, INC.

STAMPEDE

(MODEL 472)

PARTS CATALOG

NO. 472 - 2002

STERN ELECTRONICS, INC.

1725 DIVERSEY BOULEVARD ★ CHICAGO, ILLINOIS 60614 ★ PHONE (312) 935-4600

INTRODUCTION

THIS PARTS CATALOG HAS BEEN COMPILED TO HELP THE SERVICEMAN IN SELECTING THE PARTS NECESSARY FOR PROPER MAINTENANCE. WHEN ORDERING PARTS ALWAYS SPECIFY NAME OF UNIT PART NUMBERS AND A DESCRIPTION OF THE PART AS SHOWN IN THIS CATALOG.

CAT. NO. 472-2002

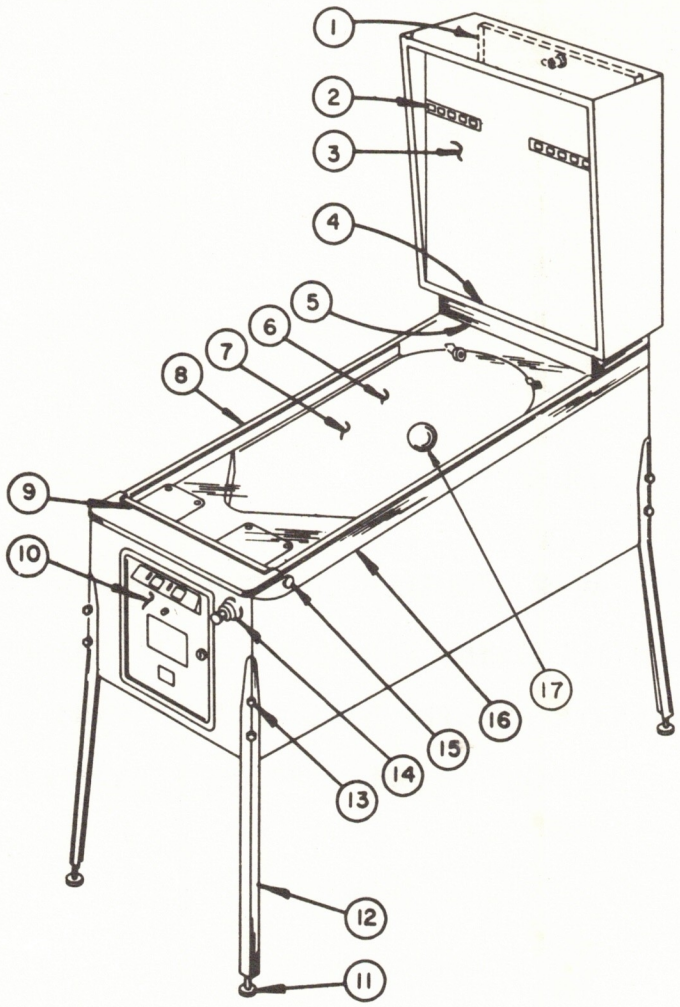

ITEM	PART NO.	DESCRIPTION
1	460-504	BACK DOOR
2		SCORING DRUM UNITS (SEE PAGE 26)
3	468-350	BACKRACK GLASS
		(26-1/2" x 23-1/2" x 3/16")
4	344-506-M	GLASS LIFT CHANNEL
	344-800-I-1	PLASTIC GLASS CHANNEL (TOP)
	344-800-H	PLASTIC GLASS CHANNEL (TWO SIDE)
5	295-536	GLASS BACK SPACER
	295-537	GLASS TOP BACK ARCH
6		TOP OF PLAYFIELD (SEE PAGE 8)
7	#6550-T	TOP GLASS (21" x 43" x 3/16")
	295-801-A	EXTRUDED GLASS CHANNEL
		(ONE ON EACH SIDE)
8	326-539-L	GLASS CHANNEL COVER
9		FRONT MOLDING (SEE PAGE 6)
10		CASH DOOR & COMPARTMENT (SEE PAGES 4 & 5)
	446-509	CASH BOX
	339-508-B-C	CASH BOX COVER
	446-800	COIN TRAY (WIDE) (2-REQ'D.)
	446-801	COIN TRAY (NARROW)
11	#6851	LEG LEVELER
12	291-2501-B	METAL CABINET LEG ASS'Y
13		3/8-16 x 2-1/2" LG. HEX HD. BOLTS
14		SHOOTER ASS'Y (SEE PAGE 6)
15		FLIPPER BUTTON (SEE PAGE 32)
16	326-539-R	GLASS CHANNEL COVER
17	#6717-C	1-1/16" DIA. CHROME STEEL BALL

HI-SCORE POINT ADJUSTMENT FOR SCORES UNDER 108,000

2,000 - G-W	50000- ☐	☐ -00000
4,000 - O-BLU	60000- ☐	☐ -10000
6,000 - BLU-Y	70000- ☐	☐ -20000
8,000 - B-R	80000- ☐	☐ -30000
	90000- ☐	☐ -40000

EXAMPLE

G-W WIRE INTO 60,000 POSITION SCORES AT 62,000.
B-R WIRE INTO 90,000 POSITION SCORES AT 98,000.

HI-SCORE POINT ADJUSTMENT FOR SCORES STARTING AT 102,000

2,000 - G-W	50000- ☐	☐ -00000
4,000 - O-BLU	60000- ☐	☐ -10000
6,000 - BLU-Y	70000- ☐	☐ -20000
8,000 - B-R	80000- ☐	☐ -30000
	90000- ☐	☐ -40000

EXAMPLE

G-W WIRE INTO 00,000 POSITION SCORES AT 102,000.
B-R WIRE INTO 20,000 POSITION SCORES AT 128,000.

RIGHT CHUTE ADJ.

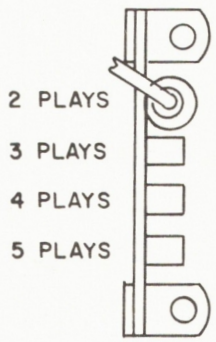

1 COIN = 1 PLAY
2 COINS = 3 PLAYS

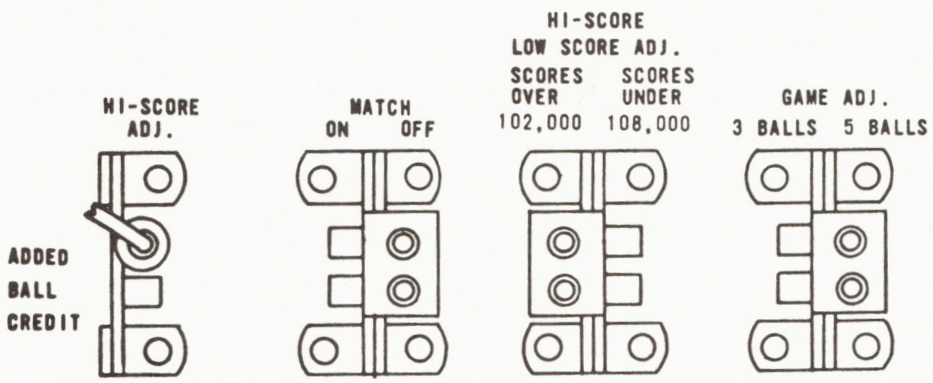

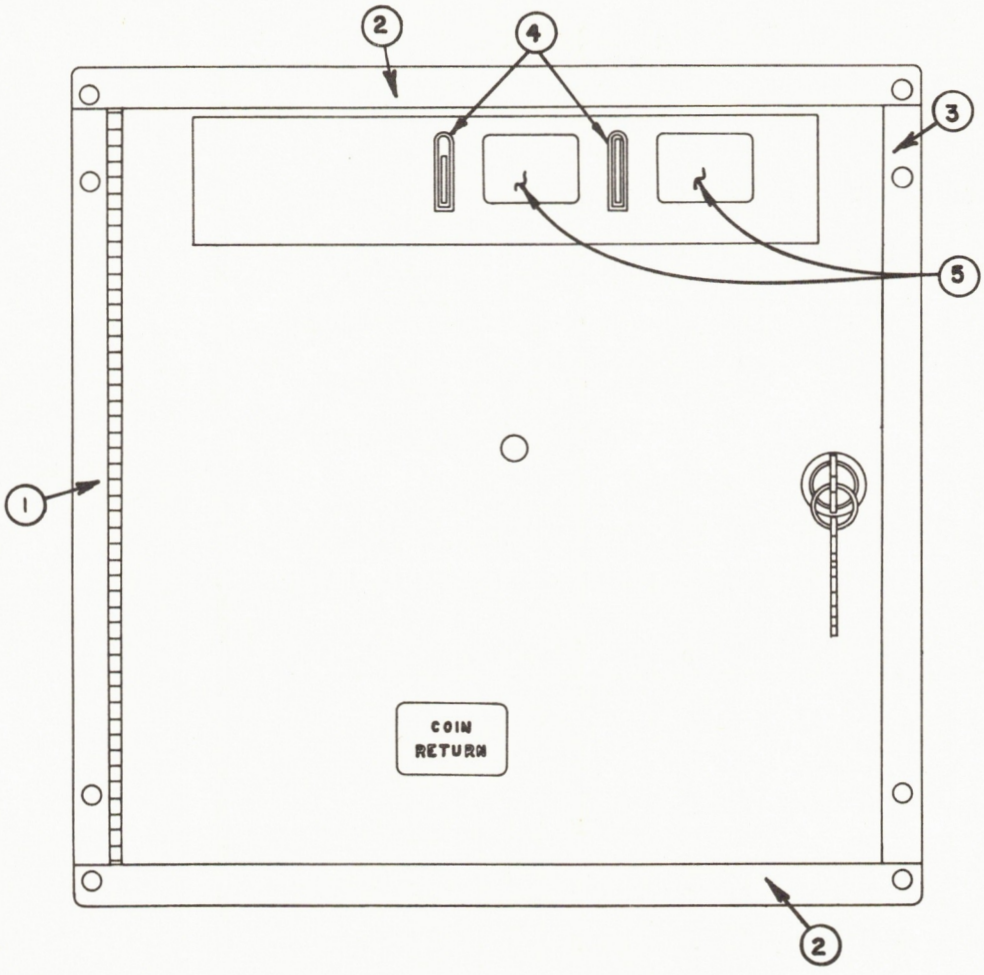

ITEM	PART NO.	DESCRIPTION
1	382-2523-B-C	COMPLETE DOOR ASS'Y (SEE PAGE 5)
2	384-501	TOP & BOTTON DOOR FRAME
3	384-500	SIDE DOOR FRAME
4		COIN ENTRY MOLDING (SEE PAGE 30)
5		COIN DENOMINATION WINDOWS (SEE PAGE 30 & 31)
6		CASH BOX (SEE PAGE 2)

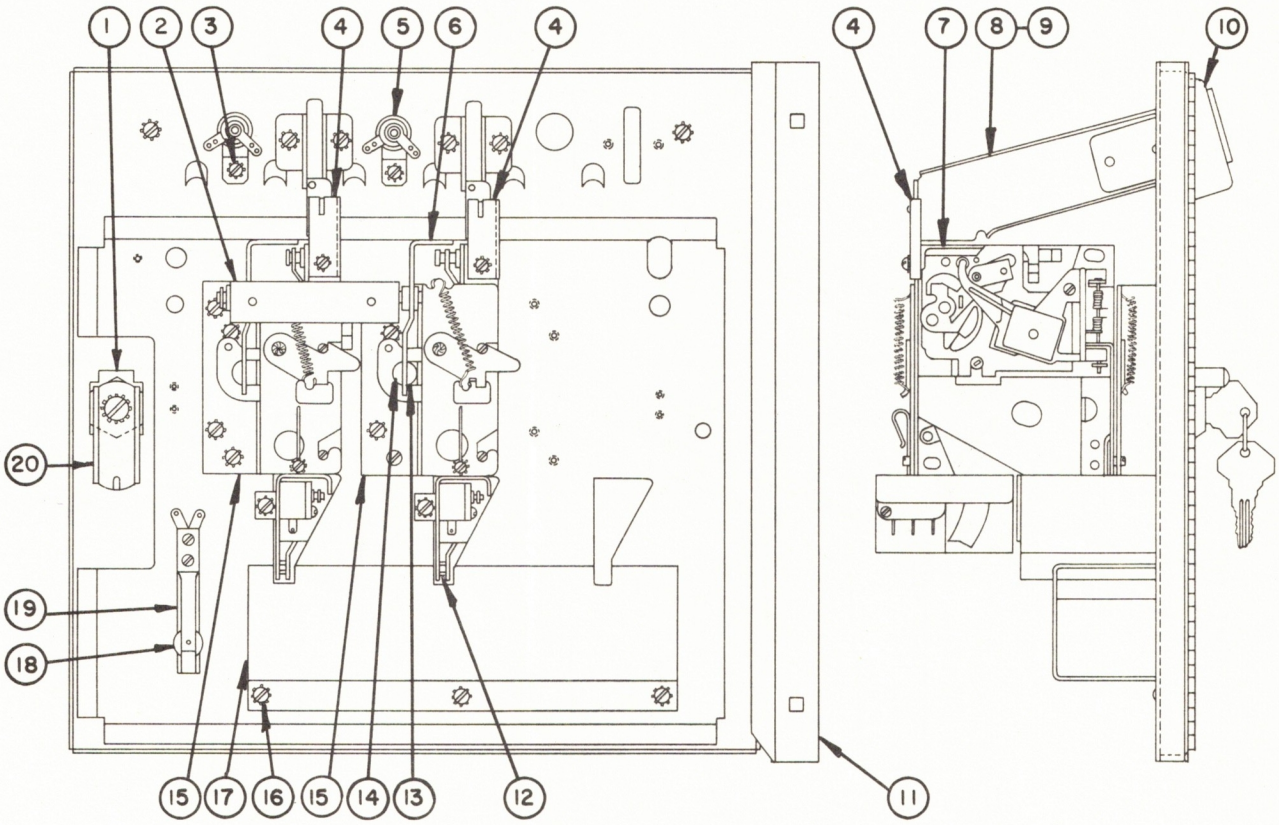

ITEM	PART NO.	DESCRIPTION
	382-2523-B-C	COMPLETE FRONT ASS'Y
1	246-551	LOCK PLATE
2	326-521	REJECTOR BRACKET
3		#6-32 x 1/4" LG. SEMS UNIT
4	248-510	CENTERING BRACKET
5	#5266	BAYONET SOCKET
	#5212	BULB
6	326-2510	REJECTOR ARM & BUSHING ASS'Y
	#5303	WASHER
	#6722-18	RETAINING RING
7	#6801	COIN ACCEPTOR INSERT (SPECIFY COIN DENOMINATION)
8	382-2501	COIN GUIDE ASSEMBLY
9	382-2502	COIN GUIDE COVER ASS'Y
	382-2502-A	COIN GUIDE COVER ASS'Y FOR 25¢ COIN ACCEPTOR ONLY
10	382-2504-B-C	COIN WINDOW BRACKET ASS'Y

ITEM	PART NO.	DESCRIPTION
11	382-2522	FRONT DOOR & REINFORCEMENT ASS'Y
12	333-2528	REJECTED COIN CONCUR FUNNEL ASS'Y
13	326-1505	REJECTOR ROD
14	#6828-37	RETAINING RING
15	333-2530-S	HOUSING, MICRO SWITCH & COIN LOCK OUT COIL ASS'Y (248-301 COIL)
	326-2522	HOUSING SHELL ASSEMBLY (326-2522-S WITH COIN LOCK OUT COIL MOUNTED)
	248-300	MICRO SWITCH (SPECIFY COIN DENOMINATION FOR PROPER MICRO SW.)
16		#8-32 x 1/4" LG. SEMS UNIT
17	326-2527	COIN RETURN HOUSING ASS'Y
18	#220	SWITCH ASS'Y
19	326-544-A	ANTI-GROUNDING FINGER
20	460-505	LOCK CAM
	#6720	LOCK

FRONT MOLDING & SHOOTER ASSEMBLY

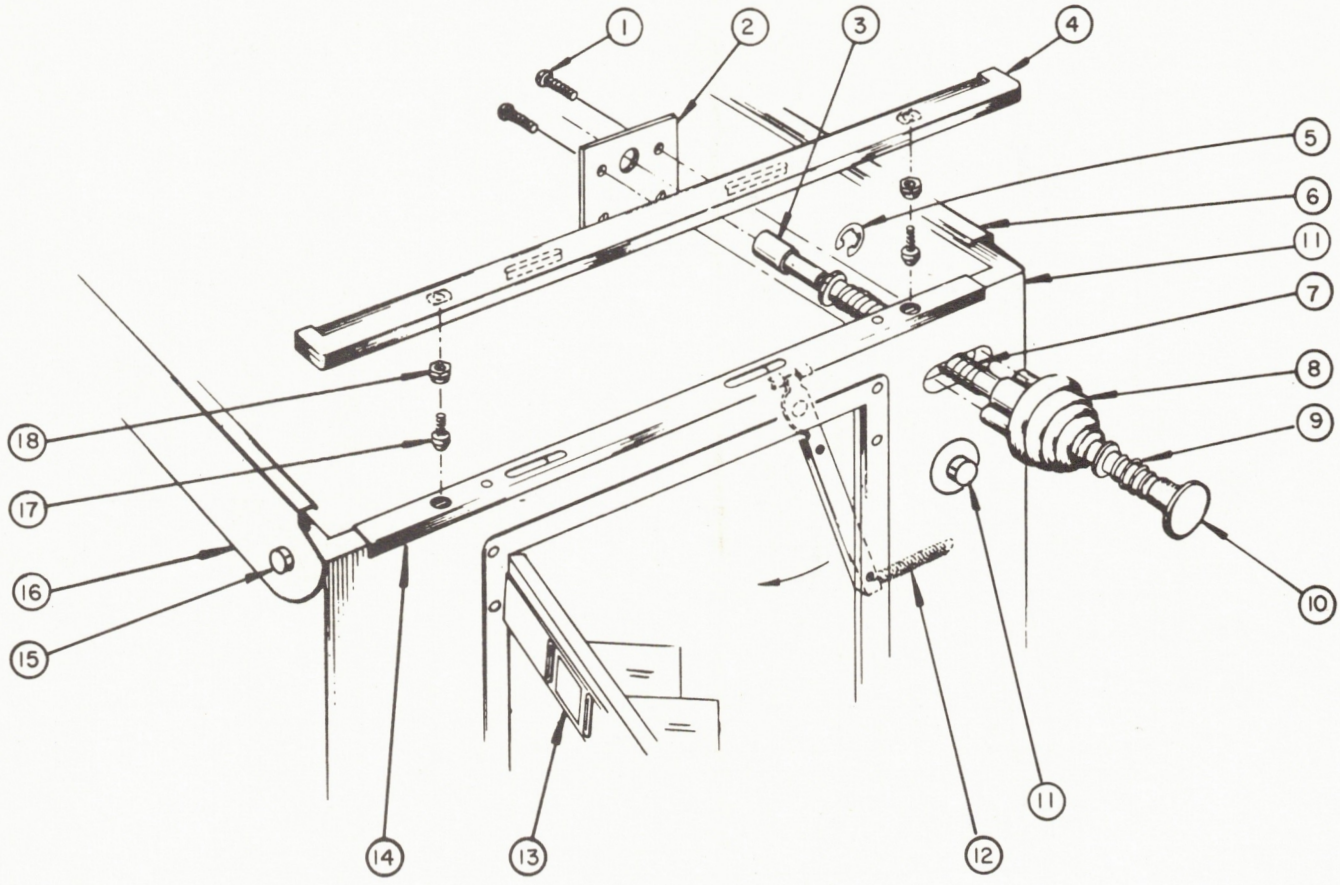

ITEM	PART NO.	DESCRIPTION
1		#8 x 1-1/4" LG. P.R. HD. S.M.S. TYPE "A"
2	308-500	PLUNGER BUSHING MTG. BRKT.
3	#6086	PLUNGER TIP
4	339-2516	FRONT MOLDING ASS'Y
5	#6722-37	RETAINING RING
6	326-539-R	GLASS CHANNEL COVER
7	295-903	SHOOTER TENSION SPRING
8	#16519-W	BALL SHOOTER HOUSING
9	295-902	SHOOTER CHECK SPRING
10	439-2508	SHOOTER ROD ASS'Y
11		CREDIT & FLIPPER BUTTON (SEE PAGE 32)
12	250-900	RETRACTION SPRING
13		CASH COMPARTMENT DOOR (SEE PAGES 4 & 5)
14	393-2503	FRONT MOLDING LOCK ASS'Y
15		LEFT FLIPPER BUTTON (SEE PAGE 32)
16	326-539-L	GLASS CHANNEL COVER
17	326-1500	FRONT MOLDING ADJUSTING SCREW
18	326-1501	FRONT MOLDING LOCK NUT

BALL EJECTOR UNIT

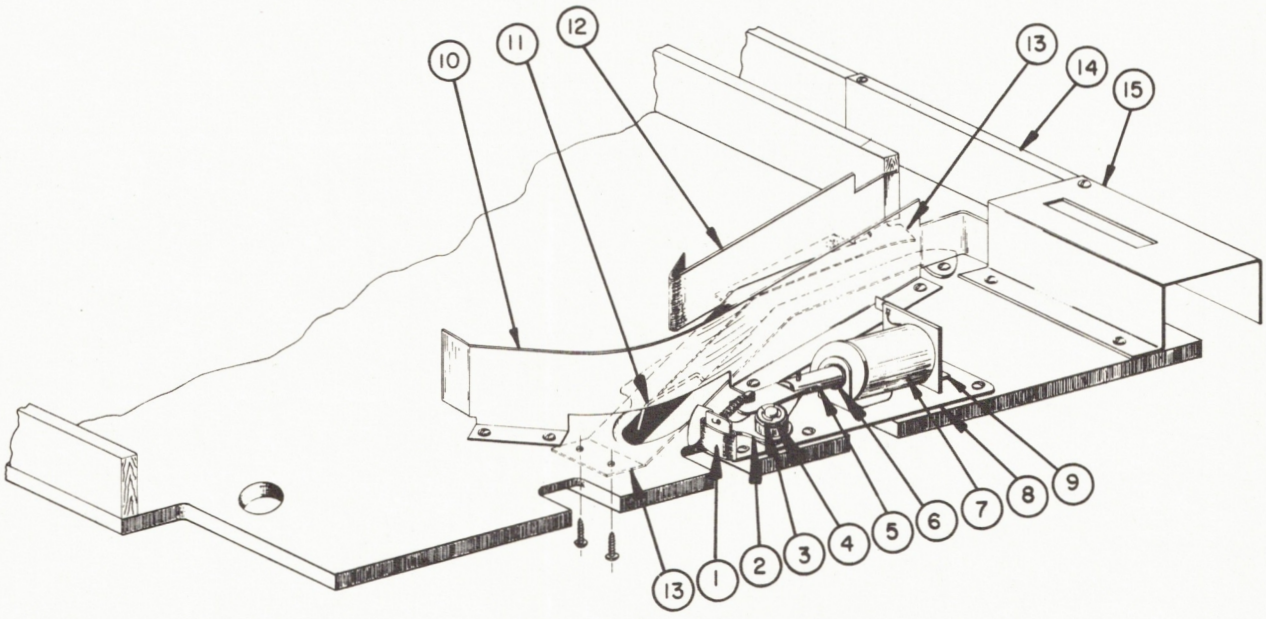

ITEM	PART NO.	DESCRIPTION
	366-2505	COMPLETE BALL EJECTOR ASS'Y (CONTAINS ITEMS 1 THRU 9)
1	326-302	PLASTIC SLEEVE
2	366-2504	BALL EJECTOR ARM ASS'Y
3	#5373	WASHER
4	#6722-25	RETAINING RING
5	366-2506-G	PLUNGER & LINK ASS'Y
6	130-1535	SOLENOID TUBING
7	J-22-550	COIL COMPLETE
8	326-2519	BALL EJECTOR MTG. PLATE ASS'Y
9	347-2512	PLUNGER STOP ASS'Y
10	326-513	LOWER BALL RETURN GUIDE RAIL
11	326-904	BALL EJECTOR WIRE FORM
12	326-512	UPPER BALL RETURN GUIDE RAIL
13	326-508	BALL RETURN RUNWAY
14	326-528	STRIKE PLATE
15	460-507-S	SHOOTER INDICATOR

TOP OF PLAYFIELD

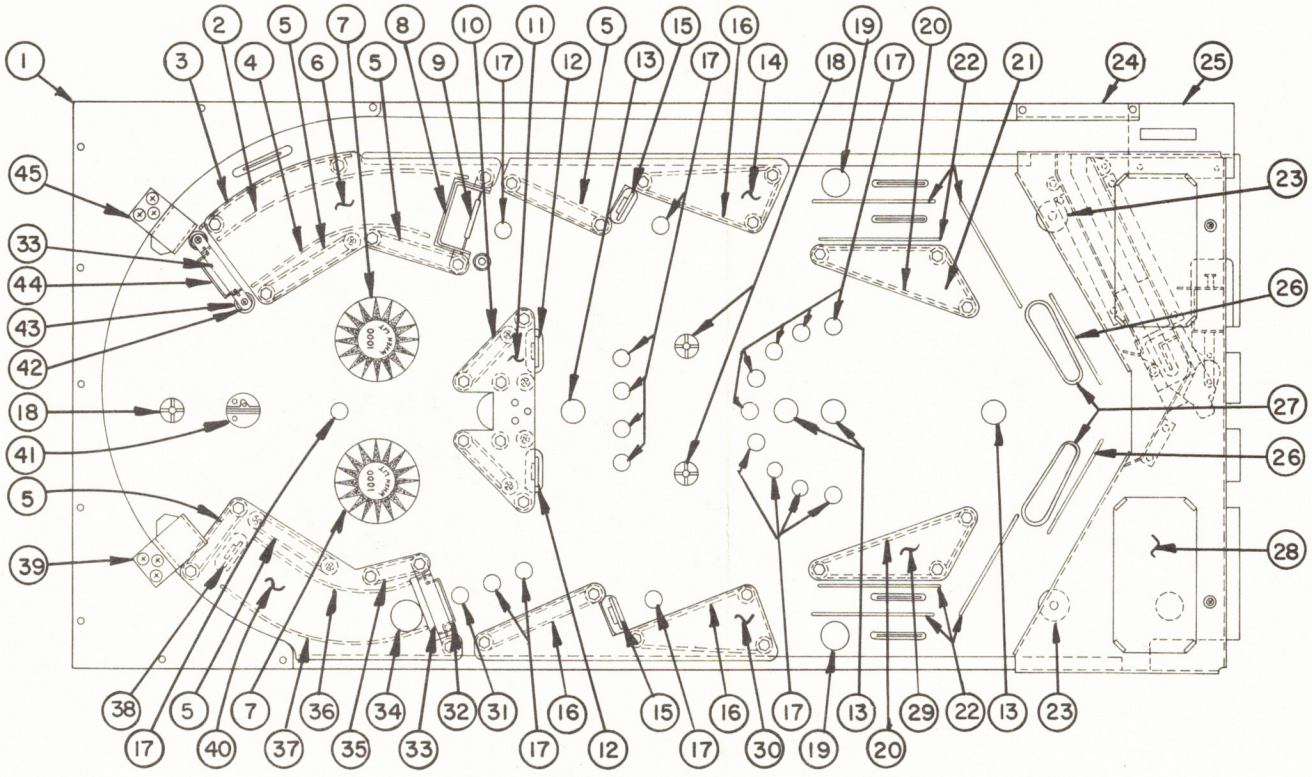

ITEM	PART NO.	DESCRIPTION
1	472-504-S	METAL ARCH TOP (SCREENED)
2	472-905	PLAYFIELD WIRE FORM
3	393-902	BALL GUIDE WIRE FORM
4	472-904	PLAYFIELD WIRE FORM
5	6052	1-1/2" DIA. RUBBER RING
6	472-300-B	PLAYFIELD LIGHT SHIELD (*)
7	468-2516	THUMPER BUMPER ASS'Y
		(SEE PAGE 10)
8	472-500	SPINNER TARGET MTG. BRKT.
9	472-2503	SPINNER TARGET ASS'Y
	333-301-A	NYLON LIMIT WASHER (2-REQ'D.)
10	6062	1-1/4" DIA. RUBBER RING
11	472-2501	CENTER LIGHT SHIELD ASS'Y (*)
12	472-2505-C	PLAYFIELD TARGET & SWITCH ASS'Y
		(SEE PAGE 28)
13	16528-W	1" DIA. PANEL INSERT (WHITE)
14	472-300-E	PLAYFIELD LIGHT SHIELD (*)
15	472-2505-B	PLAYFIELD TARGET & SWITCH ASS'Y
		(SEE PAGE 28)
16	6063	2" DIA. RUBBER RING
17	16529-W	3/4" DIA. PANEL INSERT (WHITE)
18	408-2502	ROLL OVER BUTTON ASS'Y
		(SEE PAGE 16)
19	16528	1" DIA. PANEL INSERT (YELLOW)
20	6056	3" DIA. RUBBER RING
21	472-300-G	PLAYFIELD LIGHT SHIELD (*)
22	465-900-B	PLAYFIELD WIRE FORM
23	9-570	WASHER

ITEM	PART NO.	DESCRIPTION
23	16552-8-M	PLASTIC BUSHING
	5393	WASHER
	5427	SPLIT TYPE LOCKWASHER
		#8-32 x 2-1/2" LG. S.R. HD. M.S.
		#8-32 HEX NUT
24	326-528	STRIKE PLATE
25	472-503-S	SHOOTER INDICATOR (SCREENED)
27	468-2515-L&R	FLIPPER ASS'Y (SEE PAGE 11)
28	472-502-S	INSTRUCTION PLATE (SCREENED)
29	472-300-F	PLAYFIELD LIGHT SHIELD (*)
30	472-300-D	PLAYFIELD LIGHT SHIELD (*)
31	16529-R	3/4" DIA. PANEL INSERT (RED)
32	472-901	LANE GATE WIRE FORM
33	339-2502-R	LANE GATE & STOP BRKT. ASS'Y
34	6717-C	1-1/16" DIA. CHROME STEEL BALL
35	6051	1" DIA. RUBBER RING
36	472-903	PLAYFIELD WIRE FORM
37	472-902	PLAYFIELD WIRE FORM
38	472-2505-A	PLAYFIELD TARGET & SWITCH ASS'Y
		(SEE PAGE 28)
39	231-2517-L	BALL GATE ASS'Y (LEFT)
40	472-300-A	PLAYFIELD LIGHT SHIELD (*)
41		BALL KICKER ASS'Y (SEE PAGE 13)
42	16533-W	PLASTIC POST (WHITE)
43	6060	5/16" DIA. RUBBER RING
44	452-901	LANE GATE WIRE FORM
45	231-2517-R	BALL GATE ASS'Y (RIGHT)

*MOUNTED WITH
326-1507-A ACETATE COVER MTG. POSTS &
16566-BL PLASTIC ACRON NUT

UNDERSIDE OF PLAYFIELD

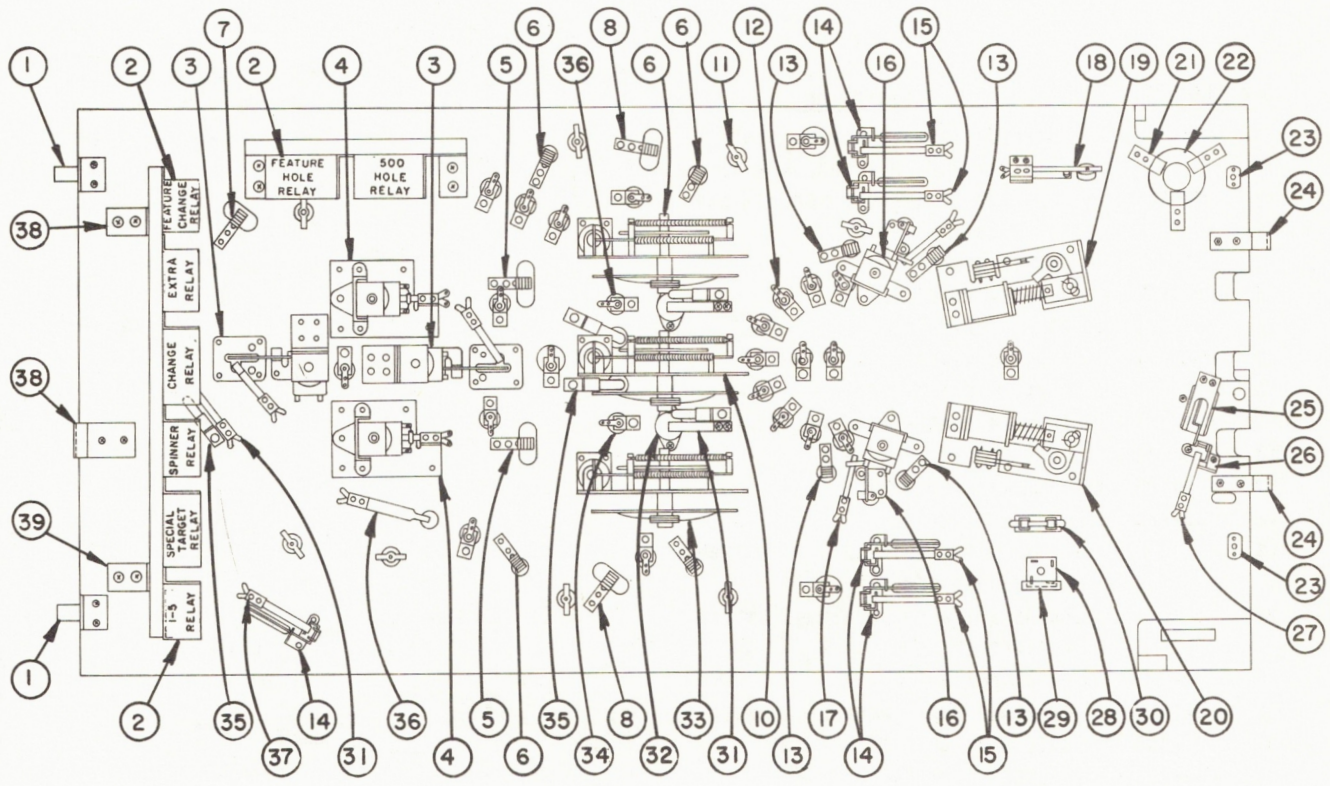

ITEM	PART NO.	DESCRIPTION
1	295-2529	PLAYFIELD LOCK ASSEMBLY
2		FOR ALL THESE RELAYS SEE PAGE 24
3		BALL KICKER ASS'Y (SEE PAGE 13)
4	468-2516	THUMPER BUMPER ASS'Y (SEE PAGE 10)
5	472-2505-C	PLAYFIELD TARGET & SWITCH ASS'Y (SEE PAGE 28)
6	437-2506	CONTACT SWITCH BRACKET ASS'Y
7	472-2505-A	PLAYFIELD TARGET & SWITCH ASS'Y (SEE PAGE 28)
8	472-2505-B	PLAYFIELD TARGET & SWITCH ASS'Y (SEE PAGE 28)
9	130-2519-B	BONUS UNIT (SEE PAGE 18)
10	130-2568-A	SPECIAL TARGET UNIT (SEE PAGE 23)
11	5232	BAYONET SOCKET (9 REQ'D.)
	5112	#47 BULB IN ALL THE SOCKETS (40 REQ'D.)
12	5240	BAYONET SOCKET (24 REQ'D.)
13	468-2542	ACTION KICKER CONTACT SWITCH
	434	CONTACT SWITCH
14	295-2557	ROLL OVER WIRE FORM & BRKT. ASS'Y
15	201	CONTACT SWITCH (TOP)
	202	CONTACT SWITCH (BOTTOM)
16	43	3 SPACER BLOCK (BOTTM)
17	26	CONTACT SWITCH (TOP)
18	468-2541	TILT CONTACT SWITCH ASS'Y
	302	CONTACT SWITCH
	339-514	TILT CONTACT BRACKET
19	468-2515-L	LEFT FLIPPER ASS'Y (SEE PAGE 11)
20	468-2515-R	FIGHT FLIPPER ASS'Y (SEE PAGE 11)
21	404-520	SPEAKER MOUNTING STRAP
22	404-311	2-1/4'' SPEAKER
23	6809	#10-32 ''T'' NUT
24	326-525	PLAYFIELD SUPPORT BRACKET
25		BALL EJECTOR UNIT (SEE PAGE 7)
26	295-2560	ROLL OVER WIRE FORM ASS'Y
27	43	3 SPACER BLOCK ASS'Y (BOTTOM)
	421-A	CONTACT SWITCH ASS'Y (TOP)
28	5608-1	RECTIFIER
29	5607-A-1/200	1 MFD 200 VDC CAPACITOR
30	5747-1	1 PLACE FUSE BLOCK
31	420	CONTACT SWITCH ASS'Y (SEE PAGE 16)
32	408-2502	ROLL OVER BUTTON ASS'Y (SEE PAGE 16)
33	130-2571-B	FEATURE UNIT (SEE PAGE 22)
34	5231	BAYONET SOCKET (2-REQ'D.)
35	5206	BAYONET SOCKET (5-REQ'D.)
36	392	CONTACT SWITCH ASS'Y
37	304	CONTACT SWITCH ASS'Y
	139-510-B	FINGER STOP
38	439-513	RELAY BOARD MTG. BRKT.
39	295-586	PLAYFIELD LIMIT BRKT.

ITEM	PART NO.	DESCRIPTION
	468-2516	COMPLETE THUMPER BUMPER ASS'Y
1		#4 x 1/2" LG. P.R. HD. S.M.S.
2	#16563-C	RED (100) DIAMOND SUNFLOWER CAP
3	#5112	#47 BULB
4	#5234	BUMPER SOCKET
5	#16513-B-Y	THUMPER WAFER
6	231-1507-A	POWER BUMPER ROD
7	#16552-6-C	PLASTIC SPACER
8	#16556	PLASTIC STAND-OFF
9	468-2514	THUMPER BUMPER MTG. PLATE ASS'Y
10	119-502	COIL SUPPORT BRACKET
11	J-24-850-DC	D.C. COIL COMPLETE
12	130-805	SOLENOID TUBING
13		#6-32 x 1/4 LG. S.R. HD. EXTERNAL LOCKWASHER SEMS
14		#8-32 x 1/4 LG. S.R. HD. EXTERNAL LOCKWASHER SEMS
15		#6-32 HEX NUT
16	#5476	EXTERNAL SHAKEPROOF LOCKWASHER
17	393-508	COIL MTG. BRACKET
18	439-2510	PLUNGER STOP ASS'Y
19		#6-32 x 3/8 LG. S.R. HD EXTERNAL LOCKWASHER SEMS
20		#4 x 3/4" LG. S.R. HD. S.M.S. TYPE "B"
21	#6771	TINNERMAN SPACER
22	#443	CONTACT SWITCH ASS'Y
23		#6-32 ELASTIC STOP NUT
24	119-512	FIBER PLUNGER ARM
25	119-503	STAINLESS PLUNGER ARM
26	#5612-4004	DIODE
27	437-900	SPRING
28	119-1507	PLUNGER
29	#6770	TINNERMAN NUT
30	#16512	THUMPER BASE
31	3-119	SPRING
32	312-504	THUMPER RING
33	#16511-W	THUMPER BODY
34		#6-32 x 1-1/4" LG. S.R. HD. M.S.

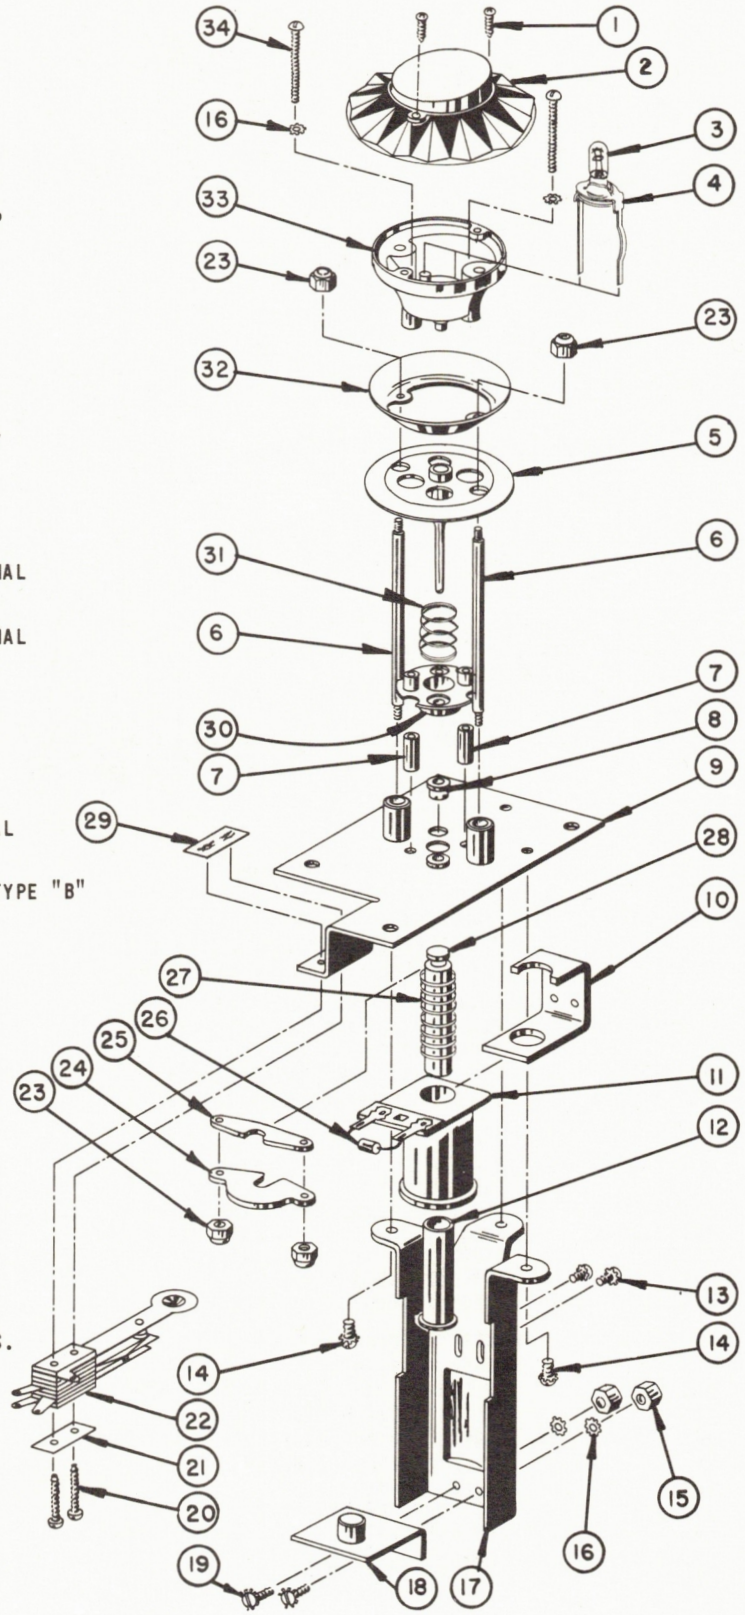

FLIPPER ASSEMBLY

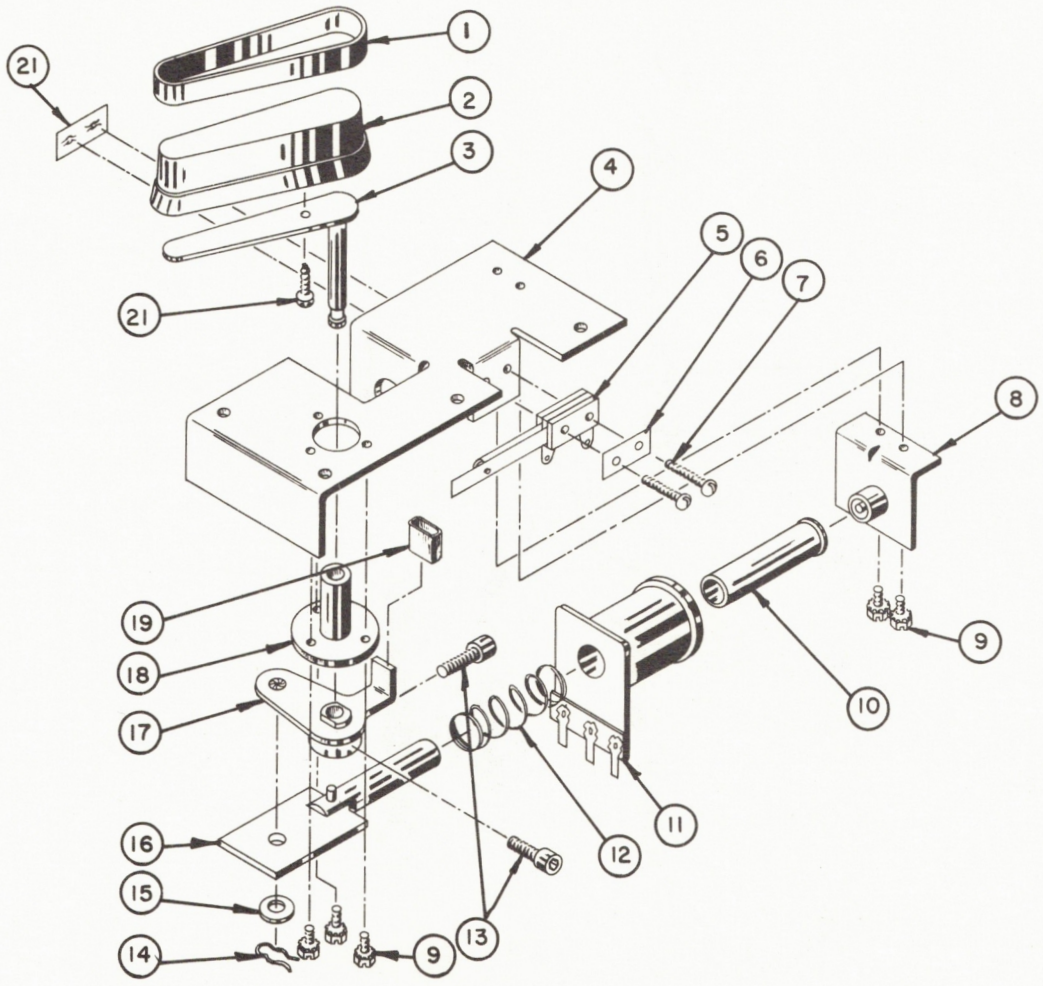

ITEM	PART NO.	DESCRIPTION
	468-2515-L	COMPLETE FLIPPER ASS'Y (LEFT)
	468-2515-R	COMPLETE FLIPPER ASS'Y (RIGHT) RIGHT HAND ASS'Y SHOWN
1	#6064	FLIPPER RUBBER RING
2	#16550	3" FLIPPER
3	468-2512	FLIPPER PLATE & SHAFT ASS'Y
4	468-508-L	FLIPPER MTG. BRACKET (LEFT)
	468-508-R	FLIPPER MTG. BRACKET (RIGHT)
5	#294-BL	SWITCH ASS'Y ON LEFT FLIPPER
	#294-BR	SWITCH ASS'Y ON RIGHT FLIPPER
6	#6771	TINNERMAN SPACER
7		#4 x 5/8 LG. SHEET METAL SCREW
8	347-2512	COIL STOP ASS'Y
9		#6-32 x 1/4 LG. S.H. HD. EXTERNAL LOCKWASHER SEMS
10	130-805	SOLENOID TUBING
11	J-29-400 ---------- J-22-400	COIL COMPLETE
12	209-901	SPRING
13		#10-32 x 3/8" LG. SOC. HD. CAP SCREW
14	91-905	SPRING CLIP
15	#5330	WASHER
16	468-2521	FLIPPER PLUNGER & LINK ASS'Y
17	468-2511-L	FLIPPER ARM ASS'Y (LEFT)
	468-2511-R	FLIPPER ARM ASS'Y (RIGHT)
18	#16567	FLIPPER BUSHING
19	#6527	3/8" LG. PLASTIC SLEEVE
20		#6-32 x 1/2" LG. P. TRUSS HD. TYPE 23 S.T.S.
21	#6770	TINNERMAN NUT

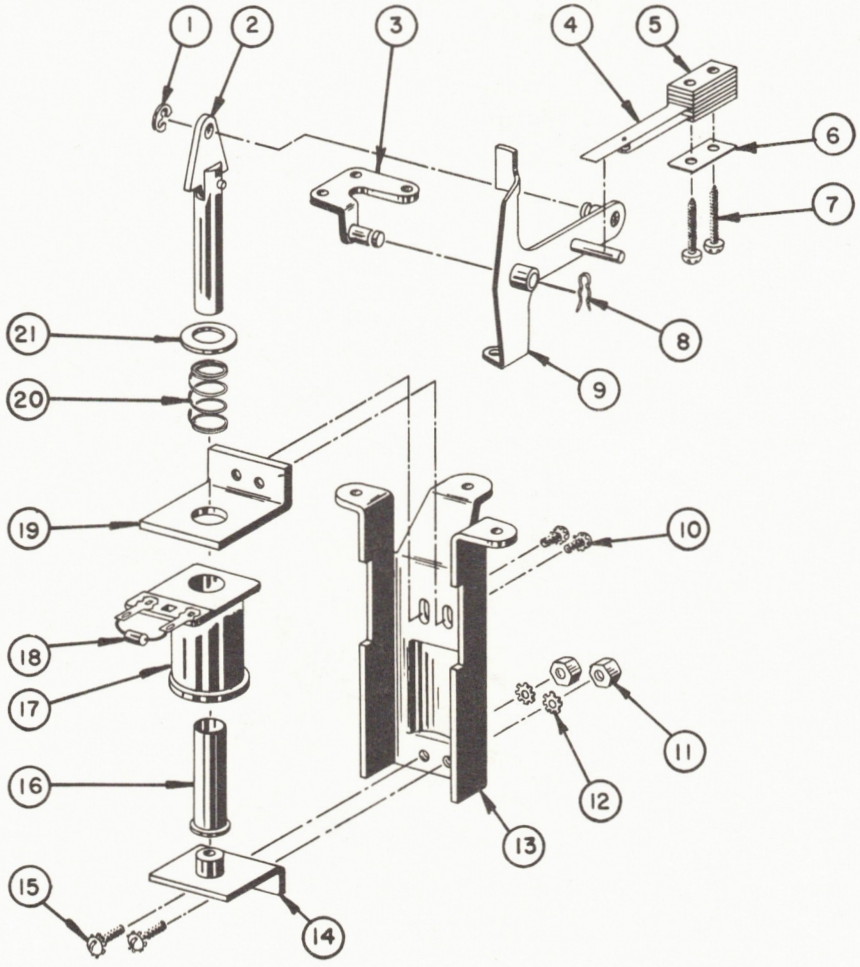

ITEM	PART NO.	DESCRIPTION
1	#6722-X21	RETAINING RING
2	295-2513	PLUNGER & LINK ASS'Y
3	295-2509	KICKER ARM BRKT. ASS'Y
4	#26	SWITCH ASS'Y
5	#43	SPACER BLOCK
6	#6771	TINNERMAN SPACER
7		#4 x 1" LG. S.R. HD. S.M.S.
8	91-905	SPRING CLIP
9	331-2510	KICKER ARM ASS'Y
10		#6-32 x 1/4" LG. S.R. HD. EXTERNAL LOCKWASHER SEMS
11		#6-32 HEX NUT
12	#5476	EXTERNAL SHAKEPROOF LOCKWASHER
13	393-508	COIL MTG. BRACKET
14	439-2510	PLUNGER STOP ASS'Y
15		#6-32 x 3/8" LG. S.R. HD. EXTERNAL LOCKWASHER SEMS
16	130-805	SOLENOID TUBING
17	J-25-1050	D.C. COIL COMPLETE
18	#5612-4004	DIODE
19	347-508	COIL SUPPORT BRACKET
20	209-901	SPRING
21	#5348	WASHER

NOTE:
TWO #434 CONTACT SWITCHES
USED PER KICKER

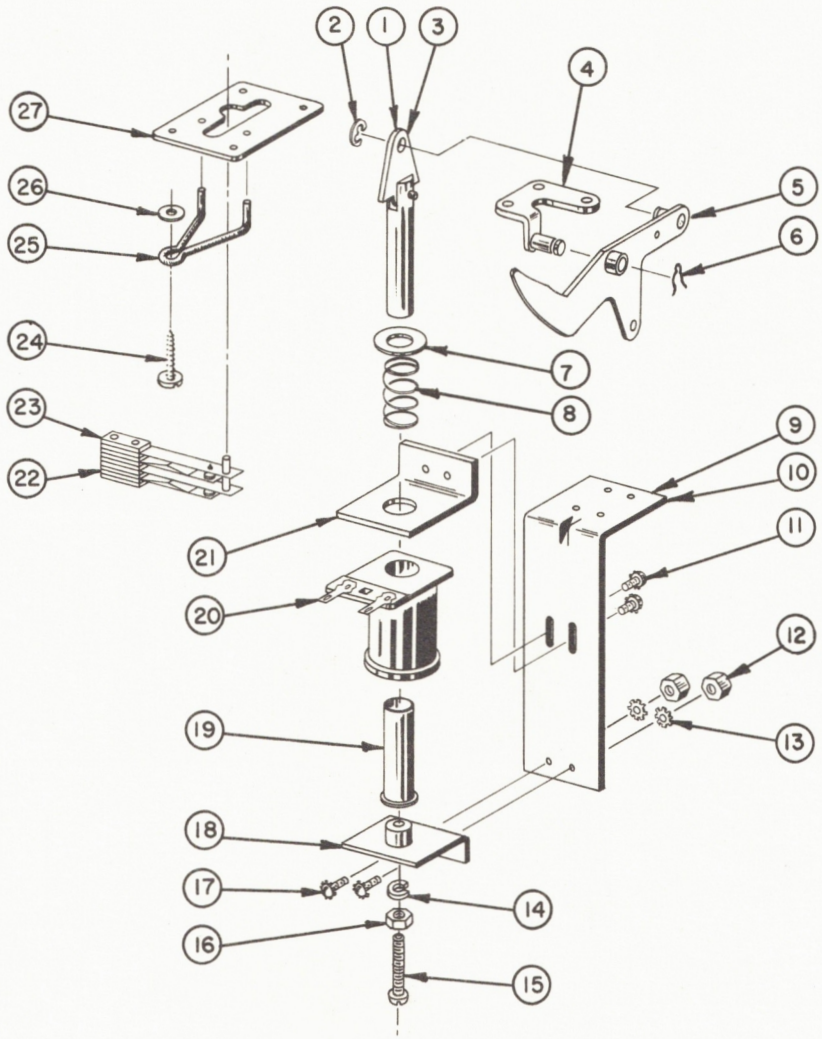

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	468-2537	BALL KICKER ARM & PLUNGER ASS'Y (INCLUDING ITEMS 2 THRU 6)	15		#10-32 x 1" LG. BRASS S.R. HD. M.S.
2	6722-X21	RETAINING RING	16		#10-32 HEX NUT
3	295-2513	PLUNGER & LINK ASS'Y	17		#6-32 x 3/8" LG. S.R. HD. EXT. L/W SEMS
4	295-2509	KICKER ARM BRACKET ASS'Y			
5	295-2510	BALL KICKER ARM ASS'Y	18	124-2500	PLUNGER STOP ASS'Y
6	91-905	SPRING CLIP	19	130-805	SOLENOID TUBING
7	5348	WASHER	20	J-26-800	COIL COMPLETE
8	209-901	SPRING	21	347-508	COIL SUPPORT BRACKET
9	468-2538	BALL KICKER COIL ASS'Y (INCLUDING ITEMS 11 THRU 22)	22	201	SWITCH ASS'Y
			23	201-D	SWITCH ASS'Y
10	347-506	COIL MOUNTING BRACKET	24		08-1/2" LG. P. TRUSS HD. S.M.S. TYPE "A"
11		#6-32 x 1/4" LG. S.R. HD. EXT. L/W SEMS	25	393-900	BALL KICK-OUT HOLE WIRE FORM
12		#6-32 HEX NUT	26	5393	WASHER
13	5476	EXTERNAL SHAKEPROOF L/W	27	16549	KICKER PAD
14	5428	SPLIT TYPE LOCKWASHER			

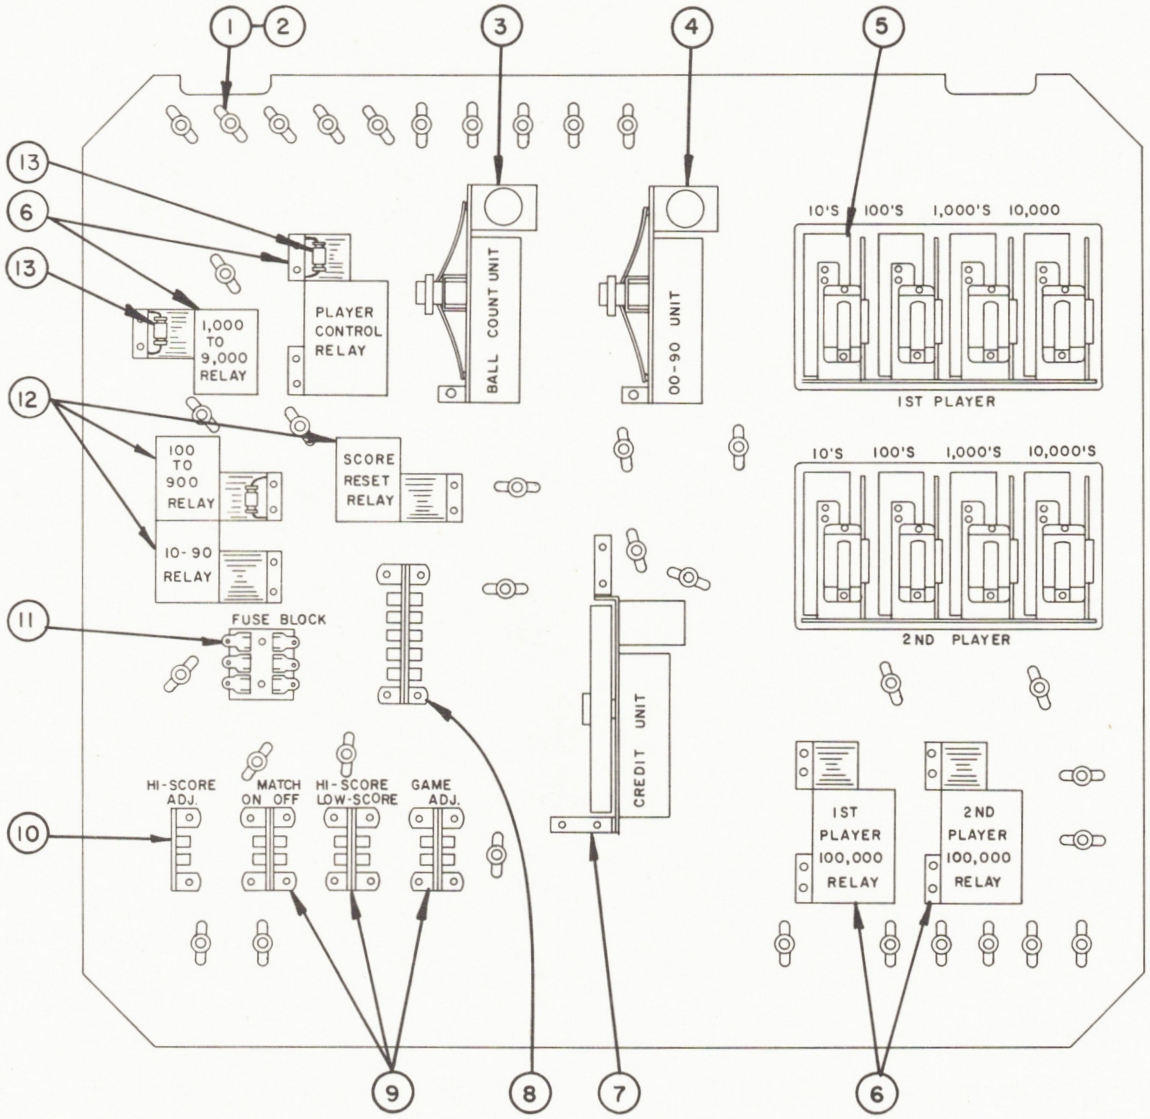

ITEM	PART NO.	DESCRIPTION
1	#5232	BAYONET SOCKET
2	#5112	#47 BULB
3	130-2568-B	BALL COUNT UNIT (SEE PAGE 19)
4	130-2571-B	00-90 UNIT (SEE PAGE 20)
5		SCORING DRUM UNIT (SEE PAGE 26)
6		FOR THESE RELAYS SEE PAGE 24
7	130-2532-H	CREDIT UNIT (SEE PAGE 21)
8	#5879	10 POINT REGULAR SOCKET
9	#5876	4 POINT REGULAR SOCKET
10	#5816	2 POINT INLINE SOCKET
11	#5747-3	3 PLACE FUSE BLOCK ASS'Y
12		FOR THESE RELAYS SEE PAGE 25
13	#5607-A-5-10/50	NON POLARIZED CAPACITOR

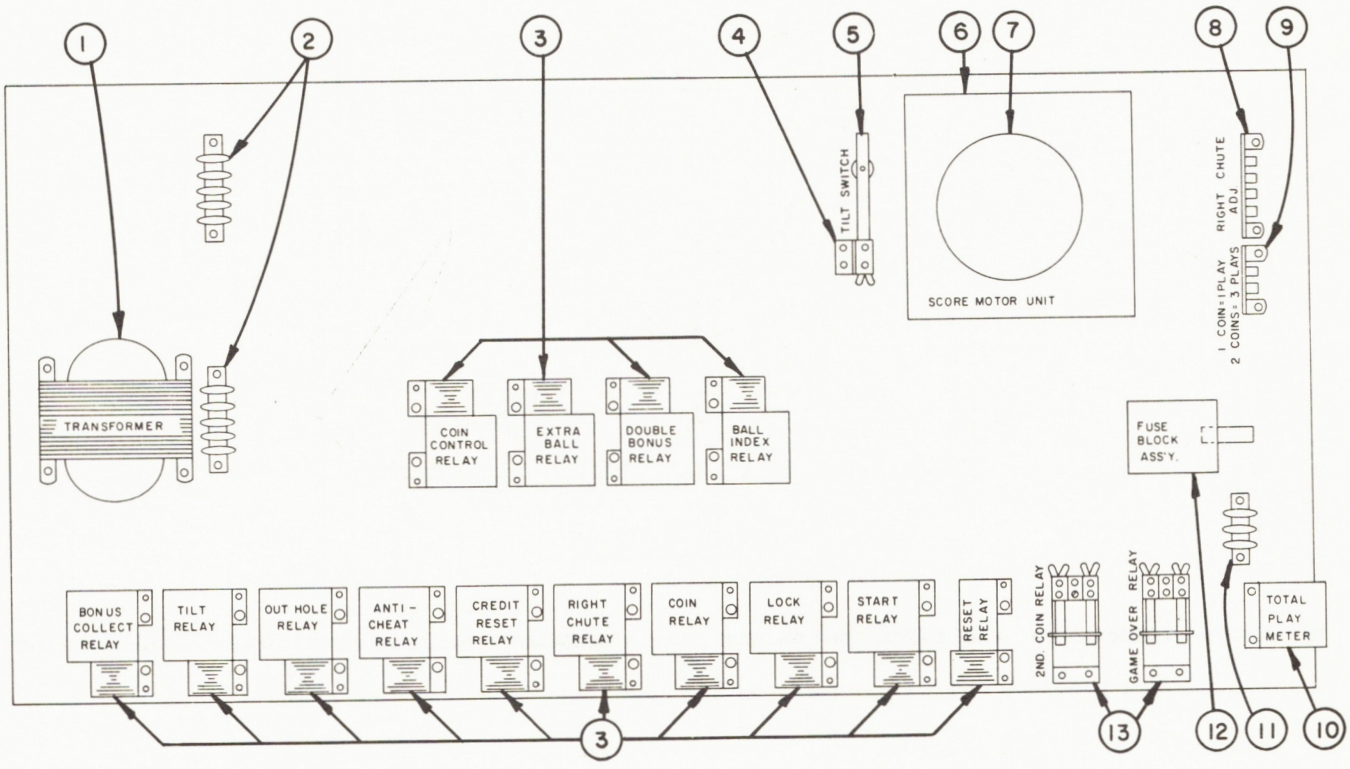

ITEM	PART NO.	DESCRIPTION
1	#5666-2518	TRANSFORMER
2	#6685-5	5 PLACE TERMINAL STRIP
3		FOR ALL THESE RELAYS SEE PAGE 24
4	431-504	CONTACT BRACKET
5	#302	TILT SWITCH
6	472-2500	COMPLETE SCORE MOTOR ASS'Y
	472-2507	SCORE MOTOR MTG. PLATE ASS'Y
	#5750-2333	SCORE MOTOR (60 Hz 22 R.P.M.)
	5750-2334	SCORE MOTOR (50 Hz 22 R.P.M.)
7	472-2506	SCORE MOTOR CAM ASS'Y (SEE PAGE 72)
8	#5821	4 POINT INLINE SOCKET
9	#5616	2 POINT MNLINE SOCKET
10	#5707	TOTAL PLAY METER
11	#6685-3	3 PLACE TERMINAL STRIP
12	431-2504	5 PLACE FUSE BLOCK ASS'Y
13		FOR THESE RELAYS SEE PAGE 25

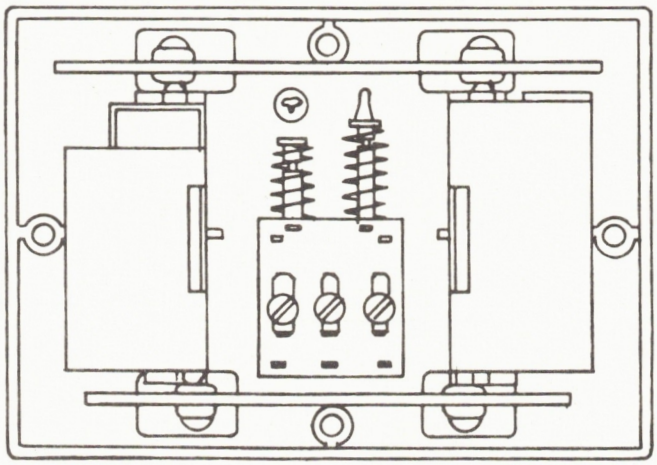

CHIME #5635

ROLL OVER BUTTON ASSEMBLY

408-2502

COMPLETE (INCLUDES 5 ITEMS UNDER LINED)

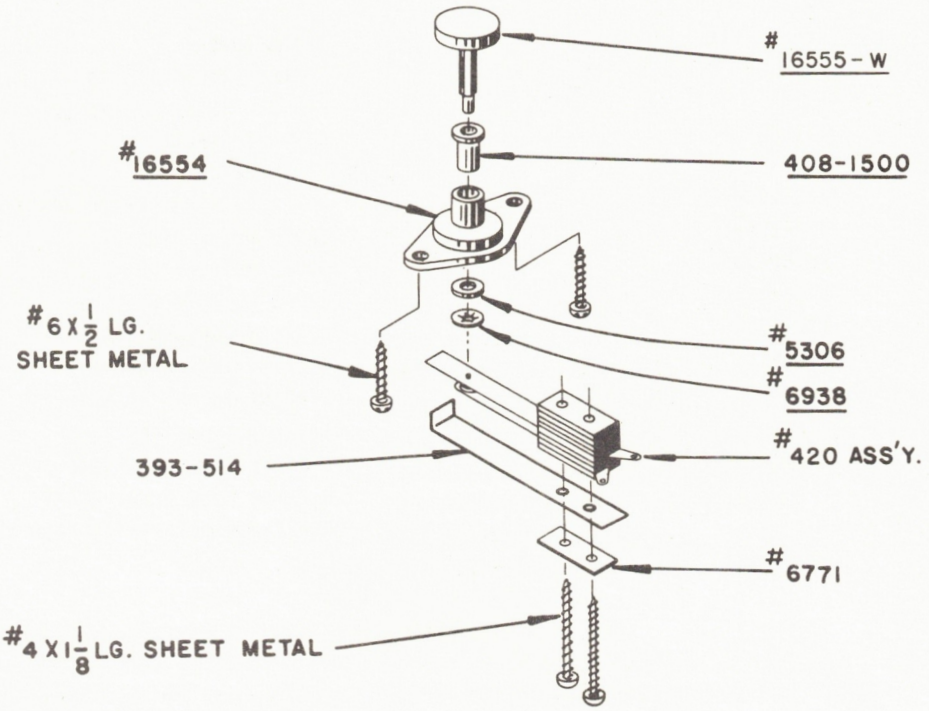

TILT BOARD & KNOCKER ASSEMBLY

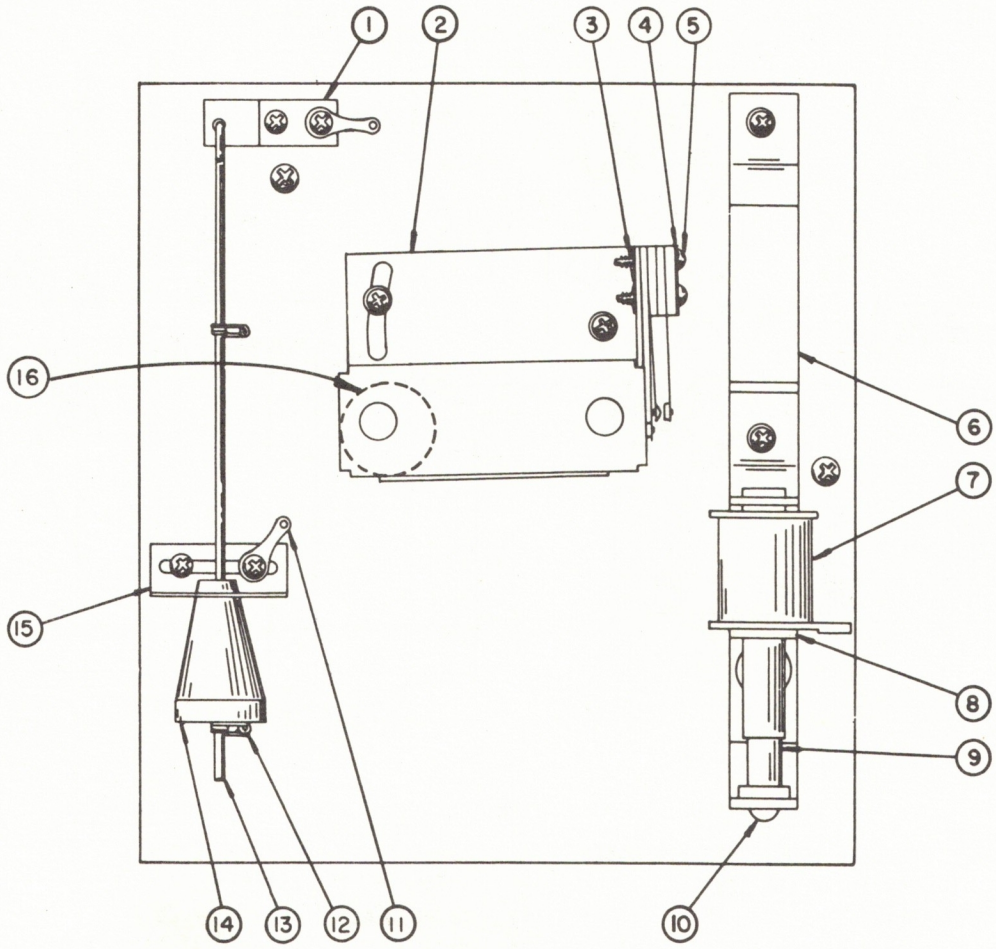

ITEM	PART NO.	DESCRIPTION
1	295-557	TILT PLUMB HANGER
2	339-511	ELEVATOR TILT
3	#6770	TINNERMAN NUT
4	#6771	TINNERMAN SPACER
5		#4 x 5/8" LG. S.M.S.
6	295-2538	KNOCKER MOUNTING BRACKET ASS'Y
7	N-26-1000	COIL COMPLETE
8	167-511	ADJ. COIL SUPPORT BRACKET
9	167-2507	PLUNGER & TIP ASSEMBLY
10	#6079	RUBBER GROMMET
11	#6654	SOLDERING LUG
12	231-907	TILT PLUMB SPRING
13	295-906	TILT PLUMB WIRE
14	295-1513	TILT PLUMB
15	295-556	TILT PLUMB CONTACT PLATE
16	#6717-C	1-1/16" DIA. CHROME STEEL BALL

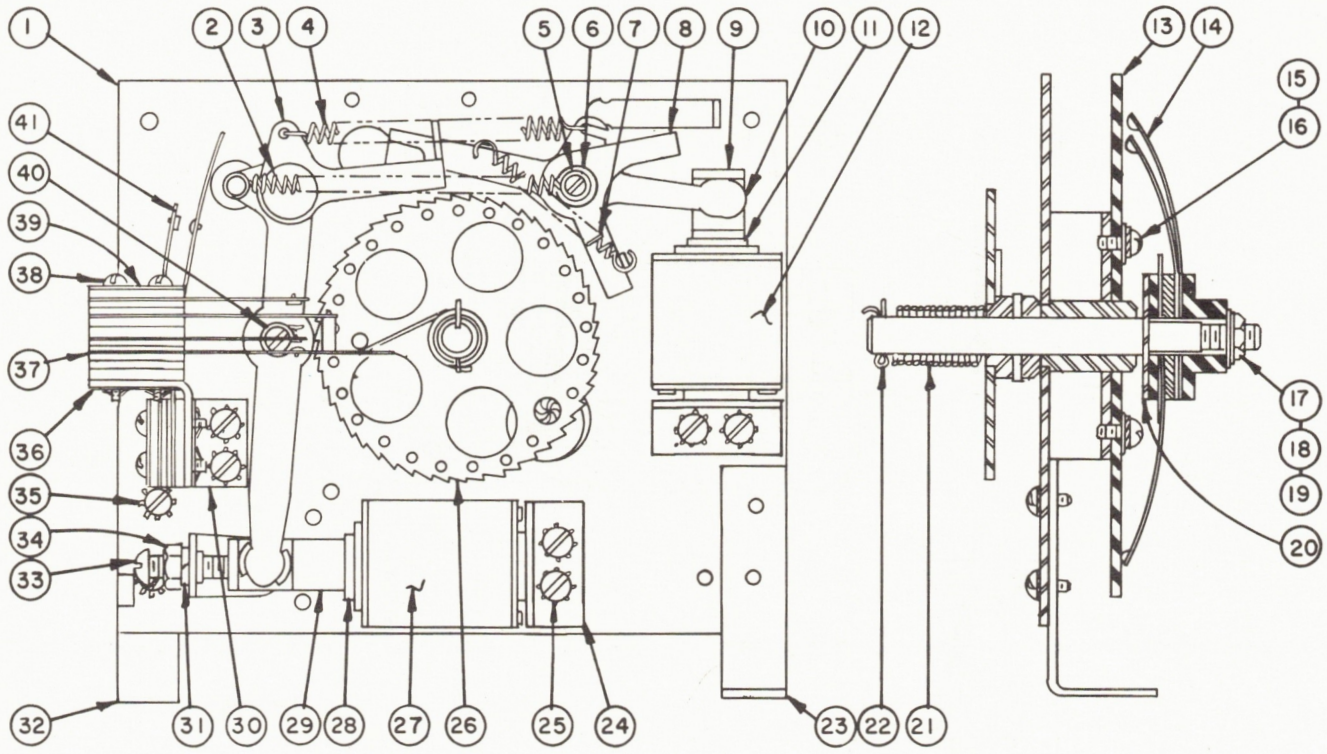

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	130-2519-A	COMPLETE BONUS UNIT (19 STEPS)	21	130-905	TORSION SPRING
1	130-2502	MOUNTING PLATE ASS'Y	22	#6752-10	COTTER PIN
2	130-910-18	SPRING	23	130-560-AS	MOUNTING LEG
3	130-2511	OPERATING ARM ASS'Y	24	347-2512	PLUNGER STOP ASS'Y
4	130-901	SPRING	25		#6-32 x 1/4 LG. SEMS UNIT
5	130-1510	RESET ARM POST	26	130-2542-19	RATCHET & POST ASS'Y
6	130-1517	RESET ARM BUSHING	27	J-22-550	STEP-UP COIL
7	129-900	SPRING	28	130-1535	STEP-UP SOLENOID TUBING
8	130-2514	ESCAPEMENT PAWL & BUSHING	29	91-1538	STEP-UP PLUNGER
9	91-1507	RESET PLUNGER	30	130-511	DOUBLE CONTACT BRKT.
10	130-2513	RESET ARM ASS'Y	31	#5428	LOCKWASHER
11	130-1536	RESET SOLENOID TUBING	32	130-560-A	MOUNTING LEG
12	H-26-650	RESET COIL	33		#10-32 x 3/4 LG. BRASS R.H.M.S.
13	468-2525	BONUS UNIT P.C. ASS'Y	34		#10-32 HEX NUT
14	468-2529	WIPER FINGER ASS'Y	35		#8-32 x 1/4 LG. SEMS
15		#6-32 x 3/8 LG. SEMS UNIT	36	#6770	TINNERMAN NUT
16	#5305	FLAT WASHER	37	#120 & #80	CONTACT SWITCH ASS'Y
17		1/4-28 HEX NUT	38		#4 S.M.S. LENGTH AS REQUIRED
18	#5429	LOCKWASHER	39	#6771	TINNERMAN SPACER
19	#5331	PLAIN WASHER	40	130-1508	OPERATING ARM POST
20	130-518	FINGER BACK-UP WASHER	42	#108	SWITCH ASS'Y

BALL COUNT UNIT

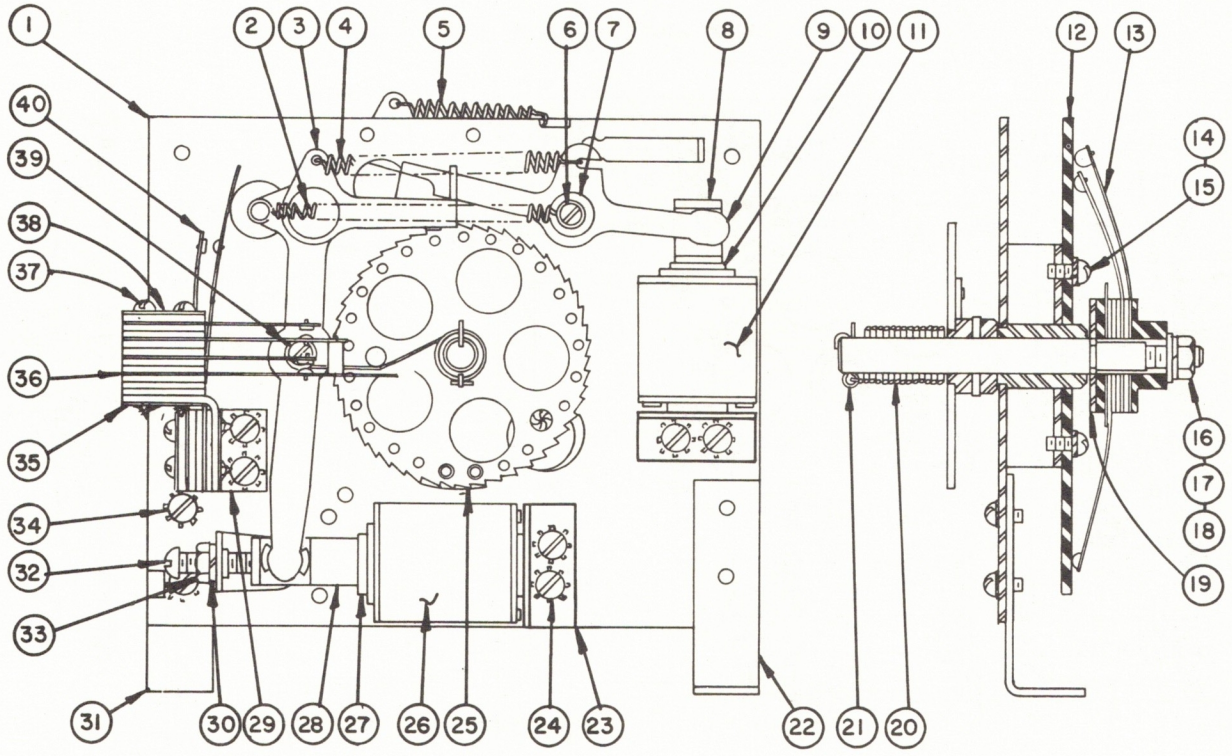

ITEM	PART NO.	DESCRIPTION
	130-2568-B	COMPLETE BALL COUNT UNIT (10 STEPS)
1	130-2502	MOUNTING PLATE ASS'Y
2	130-910-18	SPRING
3	130-2511	OPERATING ARM ASS'Y
4	130-901	SPRING
5	130-904	SPRING
6	130-1510	RESET ARM POST
7	130-1517	RESET ARM BUSHING
8	91-1507	RESET PLUNGER
9	130-2513	RESET ARM ASS'Y
10	130-1536	RESET SOLENOID TUBING
11	H-26-650	RESET COIL
12	468-2527	BALL COUNT UNIT P.C. ASS'Y
13	464-2507	WIPER FINGER ASS'Y
14		#6-32 x 3/8 LG. SEMS UNIT
15	#5305	FLAT WASHER
16		1/4-28 HEX NUT
17	#5429	LOCKWASHER
18	#5331	PLAIN WASHER
19	130-518	FINGER BACK-UP WASHER
20	130-905	TORSION SPRING

ITEM	PART NO.	DESCRIPTION
21	#6752-10	COTTER PIN
22	130-560-AS	MOUNTING LEG
23	347-2512	PLUNGER STOP ASS'Y
24		#6-32 x 1/4 LG. SEMS UNIT
25	130-2542-10	RATCHET & POST ASS'Y
26	J-22-550	STEP-UP COIL
27	130-1535	STEP-UP SOLENOID TUBING
28	91-1538	STEP-UP PLUNGER
29	130-511	DOUBLE CONTACT BRKT.
30	#5428	LOCKWASHER
31	130-560-A	MOUNTING LEG
32		#10-32 x 3/4 LG. BRASS R.H.M.S.
33		#10-32 HEX NUT
34		#8-32 x 1/4 LG. SEMS
35	#6770	TINNERMAN NUT
36	#128 & #80	CONTACT SWITCH ASS'Y
37		#4 S.M.S. LENGTH AS REQUIRED
38	#6771	TINNERMAN SPACER
39	130-1508	OPERATING ARM POST
40	#108	SWITCH ASS'Y

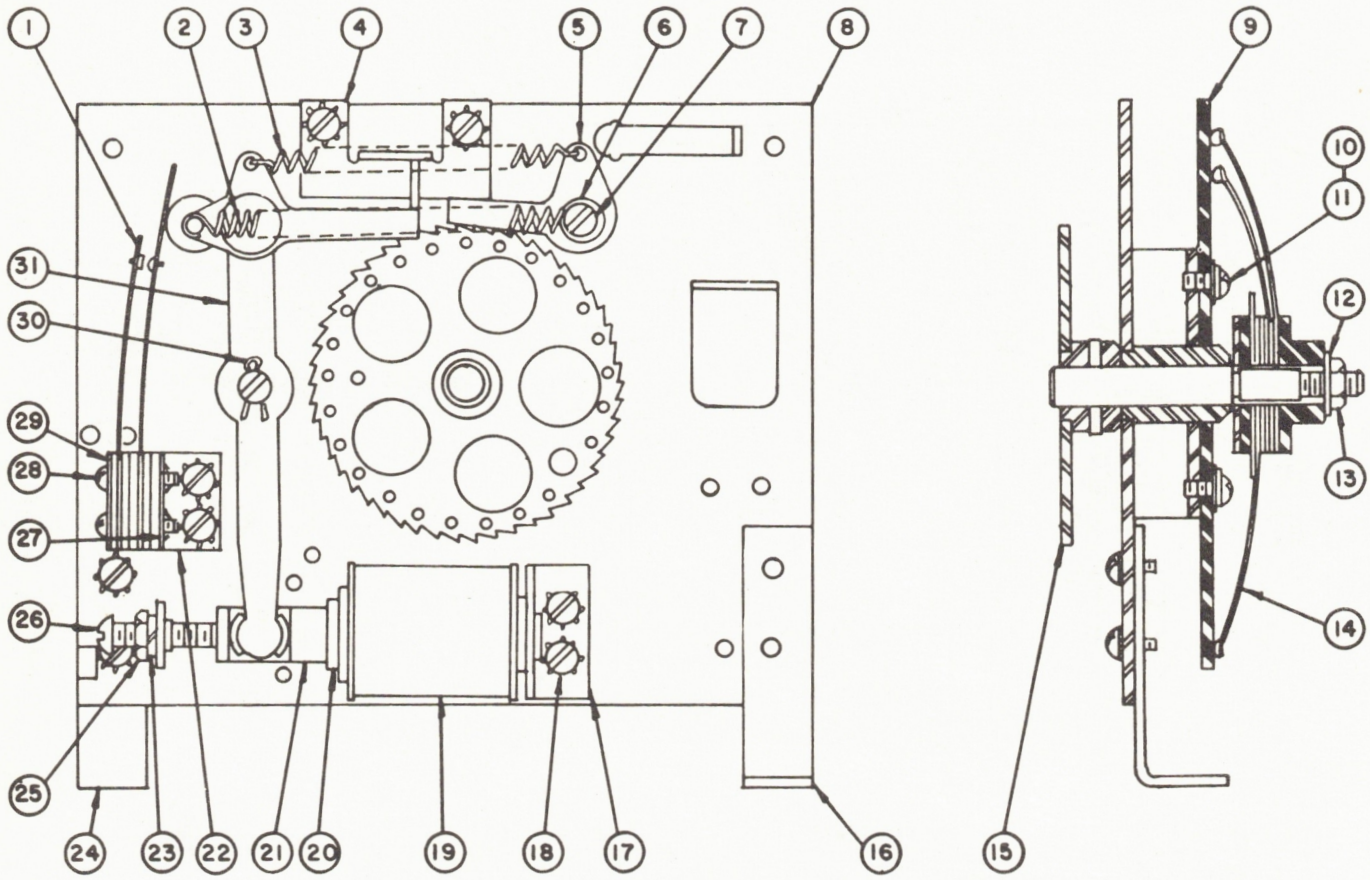

ITEM	PART NO.	DESCRIPTION
	130-2571-B	COMPLETE 00-90 UNIT
1	#108	CONTACT SWITCH ASS'Y
2	130-910-21	SPRING
3	130-901	SPRING
4	130-531	OVER RIDE RESTRAINER
5	130-2517	HOLDING PAWL & BUSHING ASS'Y
6	130-1517	RESET POST BUSHING
7	130-1510	RESET PAWL POST
8	130-2505	MOUNTING PLATE, BRKT. & BUSHING ASS'Y
9	468-2526	P.C. BOARD ASS'Y (00-90 UNIT)
10	#5305	FLAT WASHER
11		#6-32 x 3/8 LG. SEMS UNIT
12	#5429	SPLIT TYPE LOCKWASHER
13		#1/4-28 HEX NUT
14	344-2506	WIPER FINGER ASS'Y (00-90 UNIT)
15	130-2546	SHAFT, BUSHING & RATCHET ASS'Y

ITEM	PART NO.	DESCRIPTION
16	130-560-AS	MOUNTING LEG
17	347-2512	PLUNGER STOP ASS'Y
18		#6-32 x 1/4 LG. SEMS UNIT
19	J-23-700	COIL COMPLETE
20	130-1535	SOLENOID TUBING
21	91-1538	OPERATING PLUNGER
22	91-524	CONTACT BRACKET
23	#5428	SPLIT TYPE LOCKWASHER
24	130-560-A	MOUNTING LEG
25		#10-32 HEX NUT
26		#10-32 x 3/4 LG. BRASS R.H.M.S.
27	#6770	TINNERMAN NUT
28		#4 S.M.S. LENGTH AS REQUIRED
29	#6771	TINNERMAN SPACER
30	143-902	SPRING CLIP
31	130-2511	OPERATING ARM ASS'Y

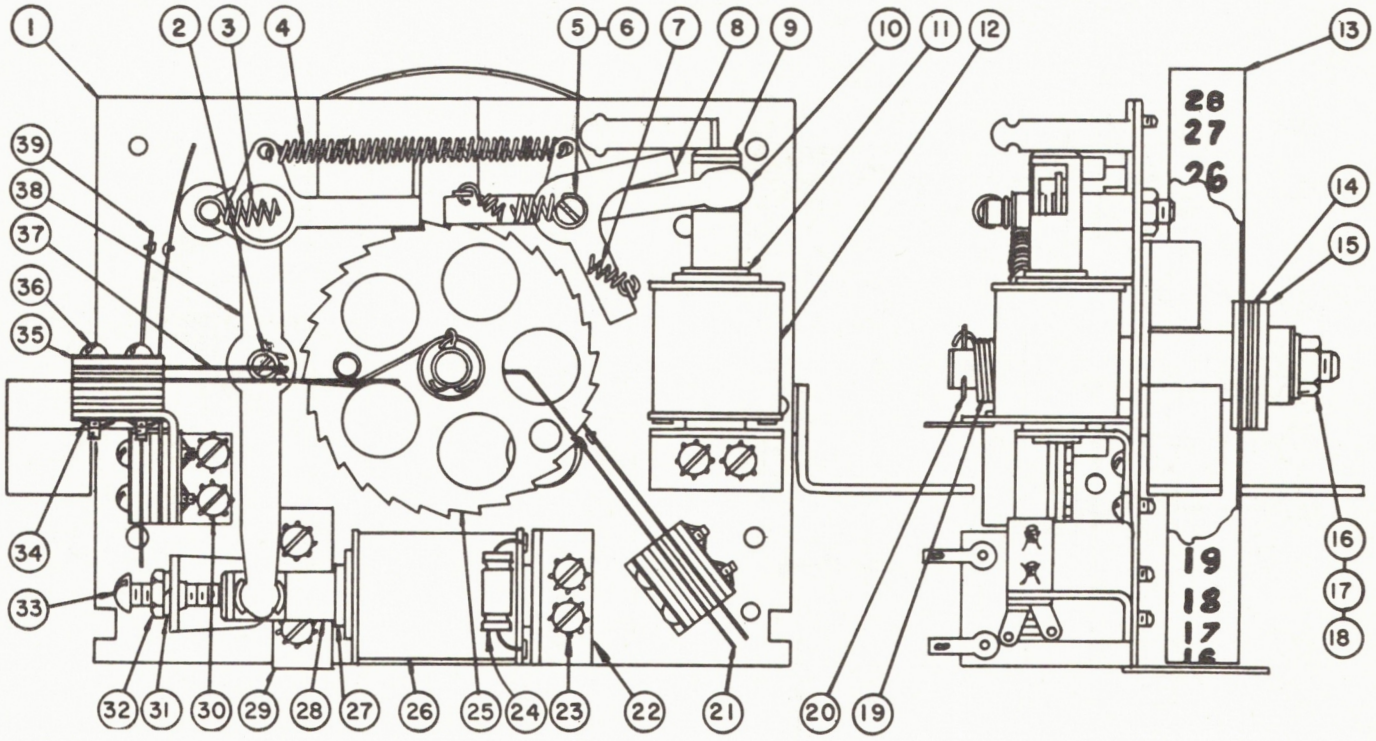

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
	130-2532-H	COMPLETE CREDIT UNIT	20	#6752-10	COTTER PIN
1	130-2597	MOUNTING PLATE ASS'Y	21	#46	SWITCH ASS'Y
2	130-1508	OPERATING ARM POST	22	347-2512	PLUNGER STOP ASS'Y
3	130-910-18	SPRING	23		#6-32 x 1/4 LG. SEMS UNIT
4	130-901	SPRING	24	#5607-A-5-10/50	NON POLARIZED CAPACITOR
5	130-1510	RESET ARM POST	25	130-2579-A	SHAFT, BUSHING, RATCHET & STUD ASS'Y
6	130-1517	RESET POST BUSHING	26	J-22-550	COIL (STEP-UP)
7	129-900	SPRING	27	130-1535	STEP-UP SOLENOID TUBING
8	130-2514	ESCAPEMENT PAWL & BUSHING	28	130-1513	STEP-UP PLUNGER
9	130-1539	RESET PLUNGER	29	130-532	WINDOW BRACKET
10	130-2513	RESET ARM ASS'Y	30	130-511	DOUBLE CONTACT BRACKET
11	130-1536	RESET SOLENOID TUBING	31	#5428	LOCKWASHER
12	H-26-650	COIL RESET	32		#10-32 HEX NUT
13	130-2552	DRUM ASS'Y	33		#10-32 x 3/4 LG. BRASS R.H.M.S.
14	130-518	WASHER	34	#6770	TINNERMAN NUT
15	130-806	FINGER HUB	35	#6771	TINNERMAN SPACER
16		1/4-28 HEX NUT	36		#4 S.M.S. LENGTH AS REQUIRED
17	#5429	LOCKWASHER	37	#128	SWITCH ASS'Y
18	#5331	PLAIN WASHER	38	130-2533	OPERATING ARM & POST ASS'Y
19	130-907	TORSION SPRING	39	#108	SWITCH ASS'Y

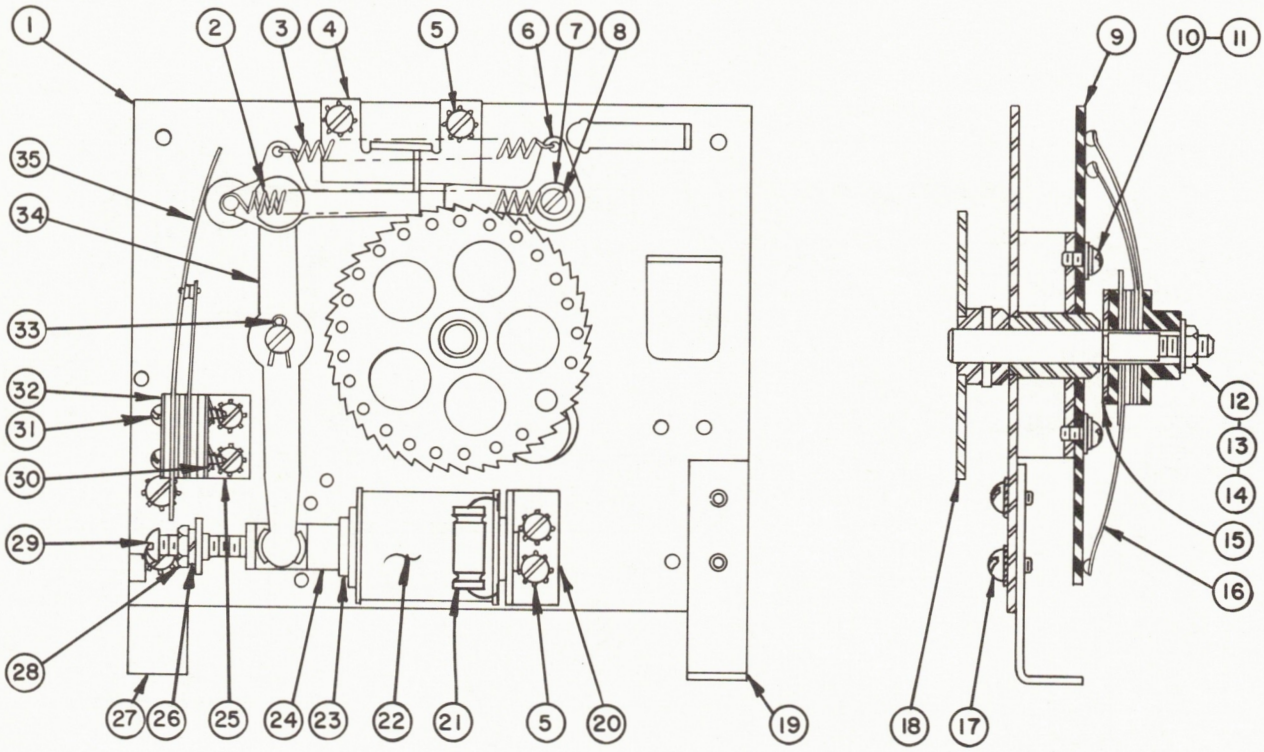

ITEM	PART NO.	DESCRIPTION
	130-2571-B	COMPLETE FEATURE UNIT
1	130-2505	MOUNTING PLATE ASS'Y
2	130-910-18	SPRING
3	130-901	SPRING
4	130-531	OVERRIDE RESTRAINER
5		#6-32 X 1/4'' LG. S.R. HD. EXT. L/W SEMS
6	130-2517	HOLDING PAWL & BUSHING ASS'Y
7	130-1517	RESET POST BUSHING
8	130-1510	RESET PAWL POST
9	472-501	FEATURE UNIT P.C. BOARD
10	5305	WASHER
11		#6 x 32 x 3/8'' LG. S.R. HD. EXT. L/W SEMS
12	5331	WASHER
13	5429	SPLIT TYPE LOCKWASHER
14		1/4-28 HEX NUT
15	130-518	FINGER BACK-UP WASHER
16	472-2502	WIPER FINGER ASS'Y
17		#8-32 x 1/4'' LG. R.S. HD. EXT. L/W SEMS
18	130-2546	SHAFT BUSHING & RATCHET ASS'Y
19	130-560-AS	MOUNTING LEG
20	347-2512	PLUNGER STOP ASS'Y
21	5607-A-5-10/50	NON POLARIZED CAPACITOR
22	J-23-700	COIL COMPLETE
23	130-1535	SOLENOID TUBING
24	130-1513	OPERATING PLUNGER
25	91-524	CONTACT BRACKET
26	5428	SPLIT TYPE LOCKWASHER
27	130-560-A	MOUNTING LEG
28		#10-32 HEX NUT
29		#10-32 x 3/4'' LG. BRASS S.R. HD. M.S.
30	6770	TINNERMAN NUT
31		#4 x 5/8'' LG. S.R. HD. S.M.S.
32	6771	TINNERMAN SPACER
33	143-902	SPRING CLIP
34	130-2511	OPERATING ARM ASS'Y
35	448	CONTACT SWITCH ASS'Y

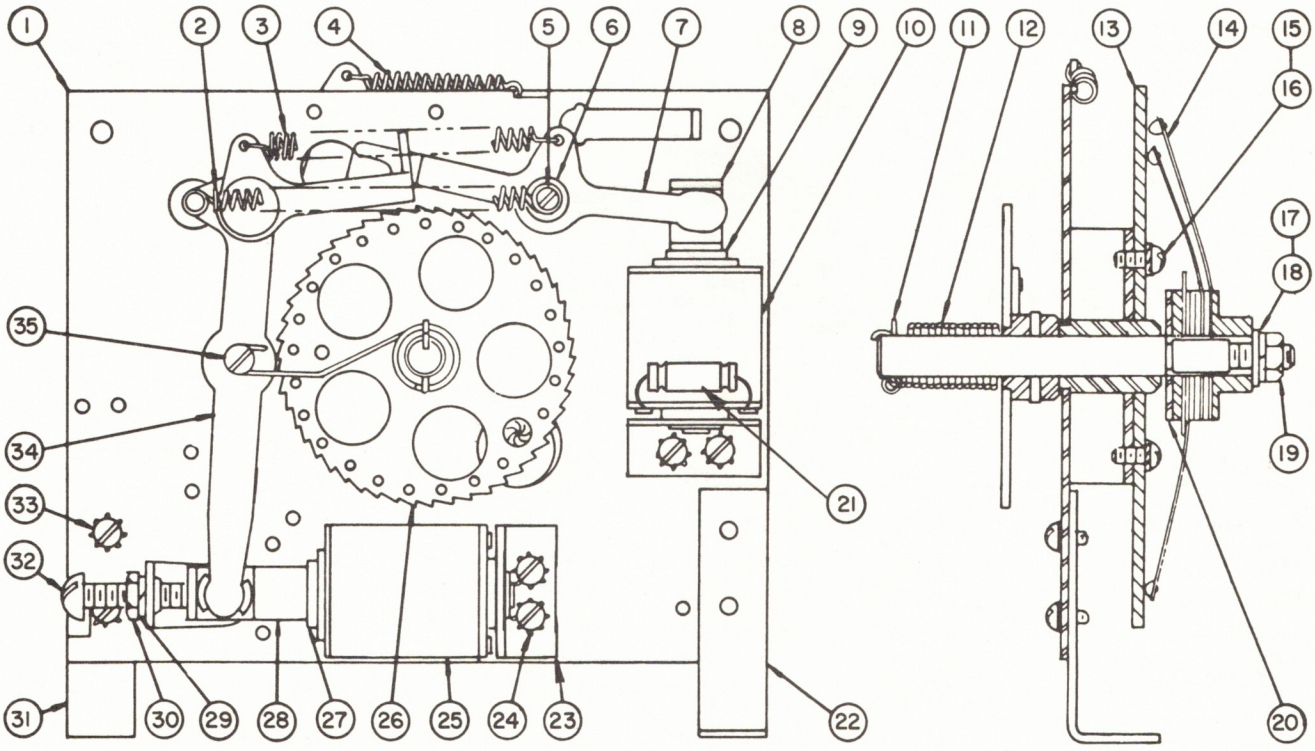

ITEM	PART NO.	DESCRIPTION
	130-2568-A	SPECIAL TARGET UNIT (3 STEPS)
1	130-2502	MTG. PLATE, BRKT. & BUSHING ASS'Y
2	130-910-18	SPRING
3	130-901	SPRING
4	130-904	SPRING
5	130-1510	RESET ARM POST
6	130-1517	RESET POST BUSHING
7	130-2513	RESET ARM ASS'Y
8	91-1507	OPERATING PLUNGER
9	91-1509	SOLENOID TUBING
10	H-26-650	COIL COMPLETE
11	#6752-10	COTTER PIN
12	130-905	TORSION SPRING
13	472-2508	SPECIAL TARGET UNIT P.C. ASS'Y
14	472-2509	WIPER FINGER
15		#6-32 x 3/8 LG. SEMS
16	#5303	WASHER
17	#5331	WASHER
18	#5429	SPLIT TYPE LOCKWASHER
19		#1/4-28 HEX NUT
20	130-518	CONTACT WASHER
21	5607-A-5-10/50	NON POLARIZED CAPACITOR
22	130-560-AS	MOUNTING LEG
23	347-2512	PLUNGER STOP ASS'Y
24		#6-32 x 1/4 LG. SEMS
25	J-22-550	COIL COMPLETE
26	130-2524-3	3 STEP SHAFT, BUSHING, RATCHET & STUD ASS'Y
27	130-1535	SOLENOID TUBING
28	91-1538	OPERATING PLUNGER
29	#5428	SPLIT TYPE LOCKWASHER
30		#10-32 HEX NUT
31	130-560-A	MOUNTING LEG
32		#10-32 x 3/4 LG. BRASS R.H.M.S.
33		#8-32 x 1/4 SEMS
34	130-2538	OPERATING ARM & POST ASS'Y
35	130-1508	OPERATING ARM POST

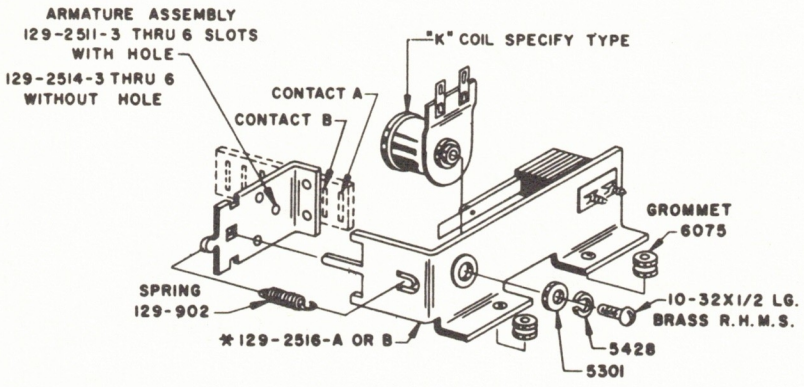

CONTACT SWITCH CODE
M-CONTACT OPEN WHEN COIL IS NOT ENERGIZED
B-CONTACT CLOSED WHEN COIL IS NOT ENERGIZED
T-TRIPLE CONTACT

* 129-2516-A FRAME ASSEMBLY WITH HOLES FOR GROMMETS
129-2516-B FRAME ASSEMBLY WITH HOLES FOR SCREWS

RELAY NAME	COMPLETE RELAY	COIL NO.	ARMATURE	CONTACT SWITCHES A	B	C	D	E	F
ANTI-CHEAT R E.	550-25502	K-28-1100	129-2511-4	M-27	T-31	B-32	B-26	B-26	
BALL INDEX RE.	550-25300	K-28-1200	129-2511-3	M-27	M-26	M-26			
BONUS COLLECT RE.	550-25600	K-28-1200	129-2511-5	M-27	M-26	M-34	M-26	M-48	B-26
CHANGE RE. (*)----------	550-25603	K-28-1200	129-2511-5	T-31	T-31	B-32	T-31	T-31	T-31
COIN CONTROL RE.	550-25201	K-29-1400	129-2511-3	M-27	T-31				
COIN RE.	550-25500	K-28-1200	129-2511-4	M-27	M-26	M-34	M-26	M-26	
CREDIT RESET RE.	550-25403	K-28-1200	129-2511-4	M-27	M-26	M-26	T-31		
DOUBLE BONUS RE.	550-25302	K-28-1400	129-2511-3	M-27	M-26	B-26			
EXTRA BALL RE.	550-25301	K-28-1200	129-2511-3	M-27	M-26	B-26			
EXTRA RE.	550-25403	K-28-1200	129-2511-4	M-27	M-26	M-26	T-31		
FEATURE HOLE RE.	550-25406	K-28-1100	129-2511-4	M-27	M-26	M-26	M-26		
FEATURE CHANGE RE.	550-25304	K-28-1200	129-2511-3	M-27	M-26	T-31-B			
LOCK RE.	550-25404	K-29-1600	129-2511-4	M-27	B-26				
OUT HOLE RE.	550-25501	K-28-1100	129-2511-4	M-27	T-31	B-32	M-26	T-31	
PLAYER CONTROL RE.	550-25504	K-28-1200	129-2511-4	M-27	M-26	M-34	B-26	T-31	
RESET RE.	550-25200	K-29-1400	129-2511-3	M-27	B-26				
RIGHT CHUTE RE.	550-25402	K-28-1200	129-2511-4	M-27	M-26	B-26	T-31		
SPECIAL TARGET RE.	550-25602	K-28-1100	129-2511-5	M-27	M-26	M-34	M-26	M-26	M-26
SPINNER RE.	550-25303	K-28-1200	129-2511-3	M-27	M-26	T-31			
START RE.	550-25601	K-28-1100	129-2511-5	M-27	T-31	M-34	M-48	T-31	B-48
TILT RE.	550-25401	K-28-1200	129-2511-4	M-27	M-26	M-26	B-48		
1st. PLAYER 100,000 RE.	550-25404	K-28-1200	129-2511-4	M-27	M-26	M-26	M-26		
2nd. PLAYER 100,000 RE.	550-25404	K-28-1200	129-2511-4	M-27	M-26	M-26	M-26		
1-5 RELAY ----------	550-25405	K-28-1100	129-2511-4	M-27	M-26	M-26	B-26		
500 HOLE RE.	550-25507	K-28-1100	129-2511-5	M-27	M-26	M-26	M-26	M-26	

(*) CHANGE RELAY HAS A 5607-A-5-10/50 NON POLARIZED CAPACITOR

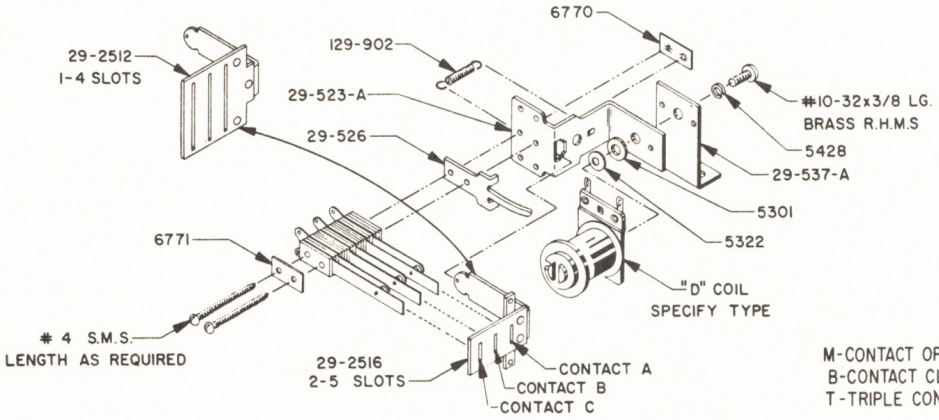

CONTACT SWITCH CODE
M-CONTACT OPEN WHEN COIL IS NOT ENERGIZED
B-CONTACT CLOSED WHEN COIL IS NOT ENERGIZED
T-TRIPLE CONTACT

RELAY NAME	COMPLETE RELAY	COIL NO.	ARMATURE	CONTACT SWITCHES
10-90 RE.	551-25001	D-27-1000	29-2516-4	ALL CONTACT SWITCHES M-28
100-900 RE.	551-25001	D-27-1000	29-2516-5	ALL CONTACT SWITCHES M-28
1000's RE.	551-25500	D-27-1000	29-2516-15	ALL CONTACT SWHITCHES M-28
SCORE RESET RE. #1	551-25801	D-26-800	29-2512-3	ALL CONTACT SWITCHES M-28

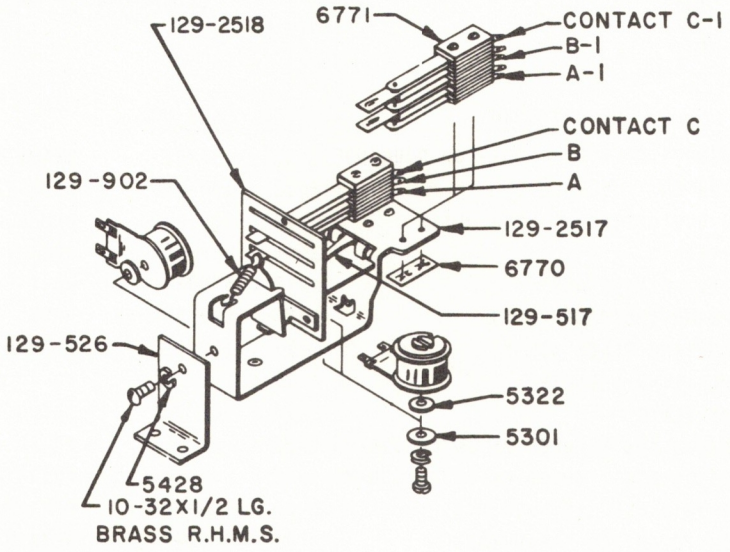

RELAY NAME	COMPLETE RELAY	COIL NO.	ARMATURE	CONTACT SWITCHES A	B	C	A1	B1	C1
GAME OVER RE.	552-25600	L-29-700	129-2518-3	M-357-A	B-357	B-357	T-356-A	B-357	T-356
2nd COIN RE.	552-25400	L-29-7 0	129-2512-2	M-357-A	T-356-A		B-356	T-356-A	

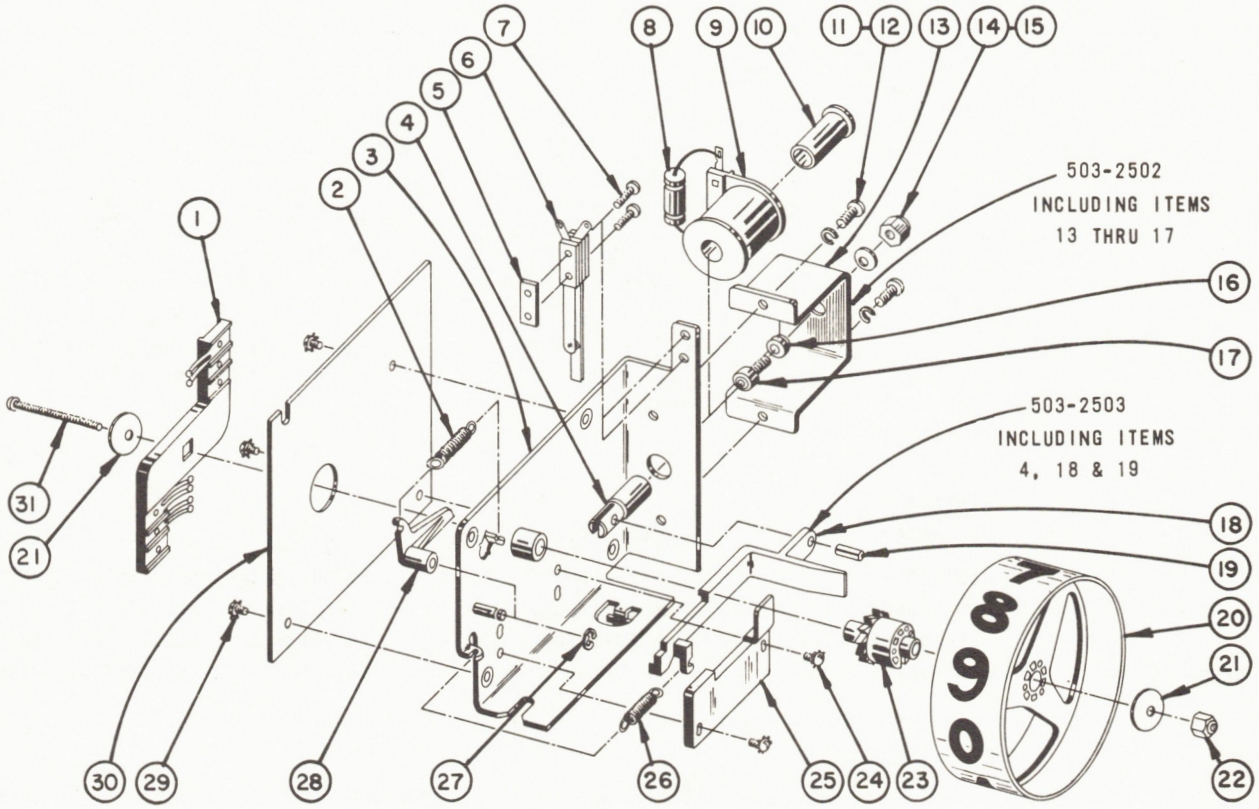

ITEM	PART NO.	DESCRIPTION
	503E-2530-A	10-90, 100-900, 1000-9000 SCORING DRUM UNITS (6-REQ'D.)
	503E-2530-B	10,000's SCORING DRUM UNITS (2-REQ'D.)
1	503-2505	WIPER FINGER ASS'Y
2	503-901	SPRING (HOLDING PAWL)
3	503-2501	MOUNTING PLATE ASS'Y
4	503-1502-G	OPERATING PLUNGER
5	503-510	NUT PLATE
6	#431-A	SWITCH ASS'Y (USED ON 503E-2530-A)
	#431-B	SWITCH ASS'Y (USED ON 503E-2530-B)
7		#2-56 x 1/2" LG. R.H.M.S.
8	5607-A-5-10/50	NON POLARIZED CAPACITOR (USED ONLY ON 10,000's DRUMS)
9	NA-26-900-X	COIL COMPLETE
10	143-1516	SOLENOID TUBING
11		#8-32 x 3/8" LG. TYPE "F" PHILLIP PAN HD. SELF TAPPING SCREW
12	#5427	SPLIT TYPE LOCKWASHER
13	503-506	COIL MTG. BRACKET
14		#10-32 ELASTIC STOP NUT
15	#5322	BRASS WASHER
16	500-1501	PLUNGER STOP BUSHING
17	500-2507	PLUNGER STOP & SLUG ASS'Y
18	503-802	OPERATING ARM
19	6703-6	ROLL PIN
20	503-800-WB	DRUM
21	#5366	WASHER
22		#4-40 ELASTIC STOP NUT
23	503-801	RATCHET
24		#4-40 x 3/16 LG. SEMS UNIT
25	503-803	ADJUSTABLE STOP
26	300-900-B	SPRING (OPERATING ARM)
27	6722-14	RETAINING RING
28	503-804	HOLDING PAWL
29		#4-40 x 3/16 LG. TYPE "F" PHILLIP PAN HD. SELF TAPPING SCREW
30	503E-507	COUNTER SWITCH P.C.
31		#4-40 x 1-1/4" LG. SLOTTED HD. M.S.

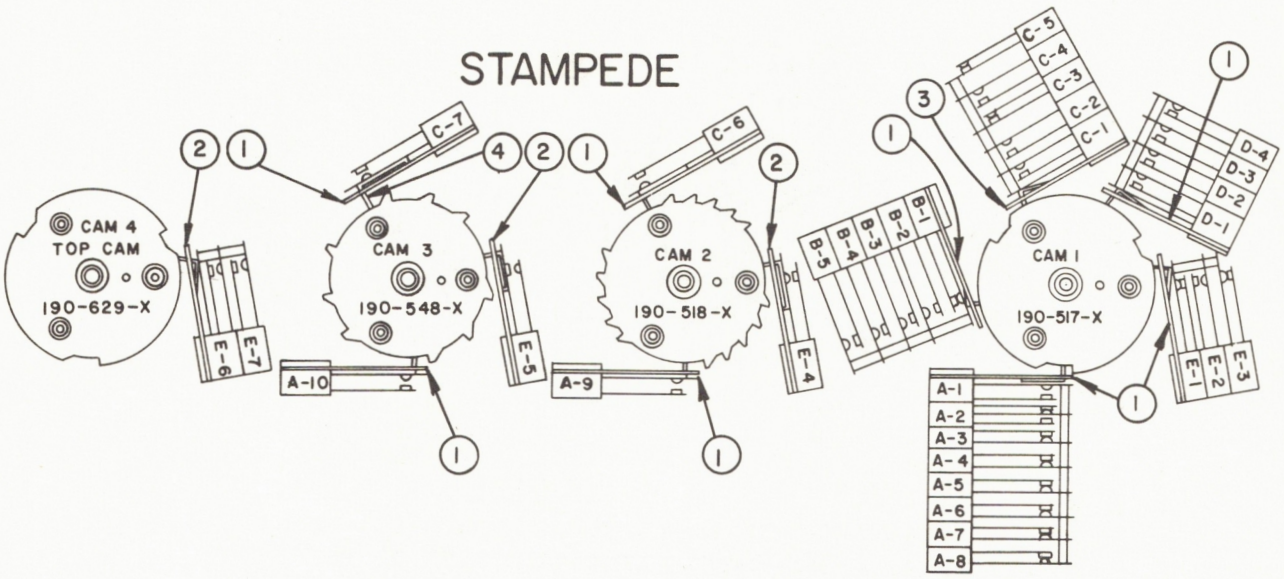

ITEM	PART NO.	DESCRIPTION
	472-2506	SCORE MOTOR CAM ASS'Y
	#5750-2333	SCORE MOTOR (60 Hz 22 R.P.M.)
	#5750-2334	SCORE MOTOR (50 Hz 22 R,P.M.)
1	115-501-F	CAM RIDER PLATE
2	115-501-A	CAM RIDER PLATE
3	115-501-P	CAM RIDER PLATE
4	115-508	CAM RIDERS (12)
A-1	#63	SWITCH ASSEMBLY
A-2	#234	SWITCH ASSEMBLY
A-3	#57	SWITCH ASSEMBLY
A-4	#57	SWITCH ASSEMBLY
A-5	#57	SWITCH ASSEMBLY
A-6	#57	SWITCH ASSEMBLY
A-7	#57	SWITCH ASSEMBLY
A-8	#57	SWITCH ASSEMBLY
A-9	#63	SWITCH ASSEMBLY
A-10	#63	SWITCH ASSEMBLY
B-1	#17	SWITCH ASSEMBLY
B-2	#325	SWITCH ASSEMBLY
B-3	#325	SWITCH ASSEMBLY
B-4	#325	SWITCH ASSEMBLY
B-5	#57	SWITCH ASSEMBLY

ITEM	PART NO.	DESCRIPTION
C-1	#60	SWITCH ASSEMBLY
C-2	#64	SWITCH ASSEMBLY
C-3	#9-B	SWITCH ASSEMBLY
C-4	#325	SWITCH ASSEMBLY
C-5	#326-A	SWITCH ASSEMBLY
C-6	#63	SWITCH ASSEMBLY
C-7	#63	SWITCH ASSEMBLY
D-1	#60	SWITCH ASSEMBLY
D-2	#325	SWITCH ASSEMBLY
D-3	#325	SWITCH ASSEMBLY
D-4	#57	SWITCH ASSEMBLY
E-1	#63	SWITCH ASSEMBLY
E-2	#325	SWITCH ASSEMBLY
E-3	#430-B	SWITCH ASSEMBLY
E-4	#63	SWITCH ASSEMBLY
E-5	#63	SWITCH ASSEMBLY
E-6	#60	SWITCH ASSEMBLY
E-7	#64	SWITCH ASSEMBLY

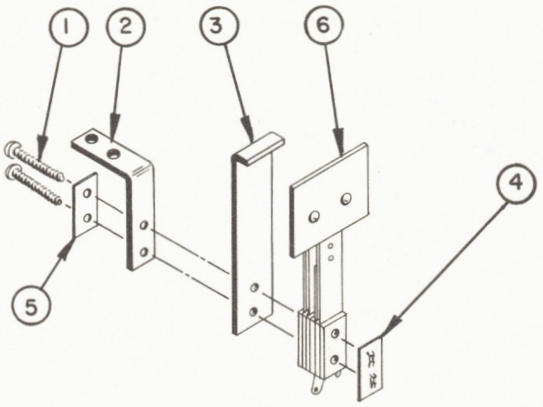

ITEM	PART NO.	DESCRIPTION
	472-2505-A	TARGET & SWITCH ASS'Y COMPLETE (1-REQ'D.)
	472-2505-B	TARGET & SWITCH ASS'Y COMPLETE (2-REQ'D.)
	472-2505-C	TARGET & SWITCH ASS'Y COMPLETE (2-REQ'D.)
1		#4 x 7/8" LG. S.R. HD. S.M.S. TYPE "B"
2	295-530-B	PLAYFIELD CONTACT BRACKET
3	468-520	FINGER STOP
4	6770	TINNERMAN NUT
5	6771	TINNERMAN SPACER
6	445-A	TARGET SWITCH ASS'Y (1-REQ'D.)
	445-B	TARGET SWITCH ASS'Y (2-REQ'D.)
	445-C	TARGET SWITCH ASS'Y (2-REQ'D.)

TRANSFORMER # 5666-2518

FOR 115 VOLT
50/60 HZ INPUT

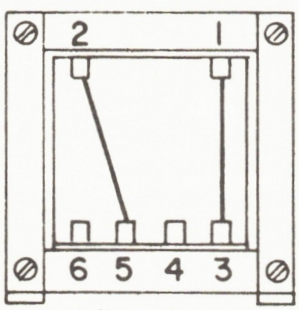

CONNECT #1 & #3 TOGETHER
CONNECT 2 & 5 TOGETHER

YELLOW=#1
BLACK =#2
DO NOT USE #4 OR #6 FOR 115 VOLT OPERATION

FOR 220-230-245 VOLT
50/60 HZ INPUT

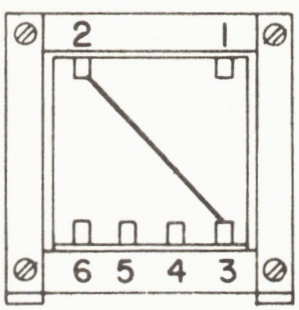

CONNECT #2 & #3 TOGETHER

YELLOW=#1
BLACK TO #4 = 220 V.
BLACK TO #5= 230 V.
BLACK TO #6 = 245V.

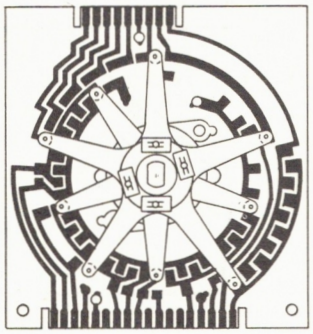

BALL COUNT UNIT
PLATE ASS'Y. 468-2527
FINGER ASS'Y. 464-2507

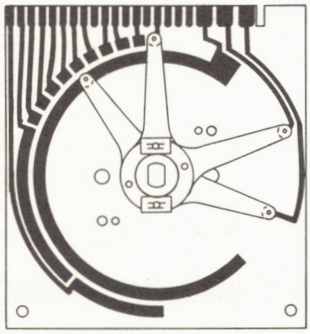

BONUS UNIT
PLATE ASS'Y. 468-2525
FINGER ASS'Y 468-2529

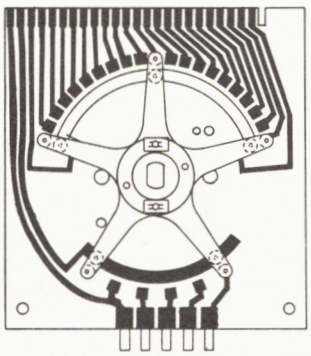

00-90 UNIT
PLATE ASS'Y. 468-2526
FINGER ASS'Y. 344-2506

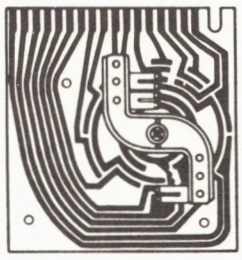

SCORING DRUM
P.C. BOARD 503E-507
WIPER FINGER ASS'Y. 503-2505

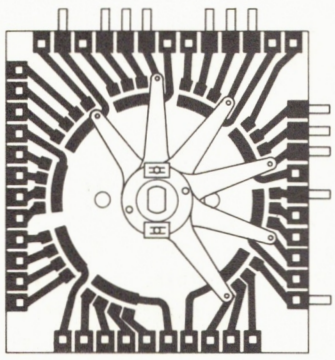

SPECIAL TARGET UNIT
PLATE ASS'Y. 472-2508
FINGER ASS'Y. 472-2509

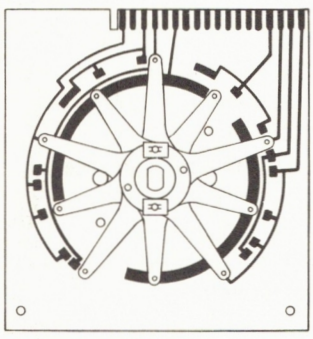

FEATURE UNIT
PLATE ASS'Y. 472-501
FINGER ASS'Y. 472-2502

COIN DENOMINATION WINDOWS

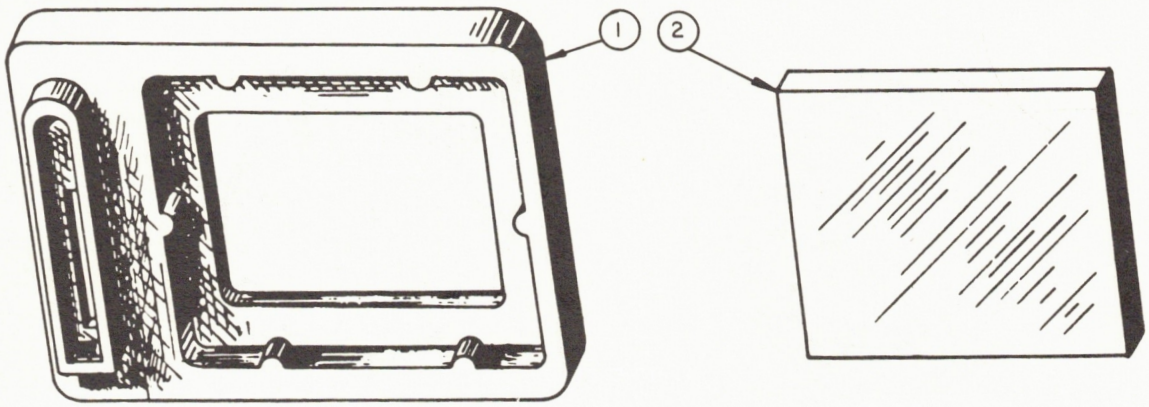

ITEM	PART NO.	DESCRIPTION
1	382-800-A	5¢ COIN ENTRY MOLDING
	382-800-B	10¢ COIN ENTRY MOLDING
	382-800-C	25¢ COIN ENTRY MOLDING
	382-800-F	FOREIGN COIN ENTRY MOLDING (SPECIFY COIN OPENING)
2	326-305-A	COIN DENOMINATION WINDOWS (2 NICKELS - 1 PLAY)
	326-305-B	(10¢ - 1 PLAY)
	326-305-C	(25¢ - 3 PLAYS)
	326-305-D	(5¢ - 1 PLAY)
	326-305-E	(25¢ - 5 PLAYS)
	326-305-F	(25¢ - 6 PLAYS)
	326-305-G	(10¢ - 2 PLAYS)
	326-305-H	(3 NICKELS - 1 PLAY)
	326-305-J	(1 DIME & 1 NICKEL - 1 PLAY)
	326-305-K	(1 QUARTER - 2 PLAYS)
	326-305-L	(25¢ - 2 PLAYERS)
	326-305-M	(2 DIMES - 2 PLAYERS)
	326-305-0	(10¢ - 1 PERIOD)
	326-305-P	(25¢ - 3 PERIODS)
	326-305-Q	(25¢ - 1 PLAY)
	326-305-R	(25¢)
	326-305-S	(25¢ - 4 PLAYS)
	326-305-T	(1 QUARTER - 1 PLAY)
	326-305-U	(A GAME OF SKILL)
	326-305-V	(1 QUARTER EACH PLAYER)
	326-305-W	(1 DIME EACH PLAYER)
	326-305-X	(QUARTER)
	326-306-A	(2 x 10 PFENNING - 1 PLAY) (GERMAN)
	326-306-B	(50 PFENNING - 3 PLAYS) (GERMAN)
	326-306-C	(1 D.M. - 6 PLAYS) (GERMAN)
	326-306-D	(50 PFENNING - 1 PLAY)(GERMAN)
	326-306-E	(50 PFENNING - 2 PLAYS) (GERMAN)
	326-306-F	(1 D.M. - 4 PLAYS) (GERMAN)
	326-306-G	(1 D.M. - 5 PLAYS) (GERMAN)
	326-306-H	(2 D.M. - 10 PLAYS) (GERMAN)
	326-306-I	(2 D.M. - 11 PLAYS) (GERMAN)
	326-306-J	(2 D.M. - 12 PLAYS) (GERMAN)
	326-306-K	(1 D.M. - 2 PLAYS) (GERMAN)
	326-306-L	(1 D.M. - 1 PLAY) (GERMAN)
2	326-306-M	(2 D.M. - 5 PLAYS) (GERMAN)
	326-306-N	(1 D.M. - 2 PLAYER) (GERMAN)
	326-306-0	(2 D.M. - 4 PLAYER) (GERMAN)
	326-306-P	(50 PFENNING) (GERMAN)
	326-306-Q	(1 D.M.) (GERMAN)
	326-306-R	(2 D.M.) (GERMAN)
	326-307-A	(50 LIRE - 1 PLAY) (ITALY)
	326-307-B	(100 LIRE - 2 PLAYS) (ITALY)
	326-307-C	(100 LIRE - 1 PLAY) (ITALY)
	326-307-D	(100 LIRE - 3 PLAYS) (ITALY)
	326-307-E	(100 LIRE - 2 PLAYERS) (ITALY)
	326-308-A	(2 x 25 ORE - 1 PLAY) (SWEDISH OR DENMARK)
	326-308-B	(1 KRONE - 3 PLAYS) (DENMARK)
	326-308-C	(50 ORE - 1 PLAY) (SWEDISH OR DENMARK)
	326-308-D	(1 KRONE - 2 PLAYERS) (DENMARK)
	326-309-A	(2 x 10 YEN - 1 PLAY) (JAPANESE)
	326-309-B	(50 YEN - 3 PLAYS) (JAPANESE)
	326-309-C	(50 YEN - 1 PLAY) (JAPANESE)
	326-309-D	(100 YEN - 3 PLAYS) (JAPANESE)
	326-309-E	(3 x 10 YEN - 1 PLAY) (JAPANESE)
	326-309-F	(50 YEN - 2 PLAYS) (JAPANESE)
	326-310-A	(1/2 FRANC - 1 PLAY) (FRENCH)
	326-310-B	(1 FRANC - 3 PLAYS) (FRENCH)
	326-310-C	(1 FRANC - 4 PLAYS) (FRENCH)
	326-310-D	(1 FRANC - 1 PLAY) (FRENCH)
	326-310-E	(2-20 CENTIMES - 1 PLAY) (FRENCH)
	326-310-F	(100 FRANC - 1 PLAY) (FRENCH)
	326-310-G	(50 CENTIMES - 1 PLAY) (FRENCH)
	326-310-H	(1 FRANC - 2 PLAYS) (FRENCH)
	326-310-I	(5 FRANCS - 1 PLAY) (FRENCH)
	326-310-J	(50 CENTIMES - 2 PLAYS) (FRENCH)
	326-310-K	(1 FRANC - 5 PLAYS) (FRENCH)
	326-310-L	(10 FRANCS - 2 PLAYS) (FRENCH)
	326-310-M	(2 x 1 FRANC - 1 PLAY) (FRENCH)
	326-310-N	(2 x 5 FRANCS - 1 PLAY) (FRENCH)
	326-310-0	(1 FRANC - 2 PLAYERS) (FRENCH)
	326-310-P	(1/2 FRANC - 2 PLAYERS) (FRENCH)
	326-310-Q	(2 x 5 FRANCS - 2 PLAYERS) (FRENCH)
	326-310-R	(10 FRANC - 1 PLAY) (FRENCH)
	326-311-A	(6d - 1 PLAY) (BRITISH)

PART NO.	DESCRIPTION
326-311-B	(ONE SHILLING - 1 PLAY) (BRITISH)
326-311-C	(TWO SHILLINGS - 2 PLAYS) (BRITISH)
326-311-D	(TWO SHILLINGS - 4 PLAYS) (BRITISH)
326-311-E	(ONE SHILLING - 3 PLAYS) (BRITISH)
326-311-F	(TWO SHILLINGS - 1 PLAY) (BRITISH)
326-311-G	(20 CENTS - 1 PLAY) (BRITISH)
326-311-H	(5d - 1 PLAY) (BRITISH)
326-311-I	(5d - 2 PLAYERS) (BRITISH)
326-311-J	(10 PENCE - 4 PLAYERS) (BRITISH)
326-311-K	(TWO SHILLINGS - 5 PLAYS) (BRITISH)
326-311-L	(10 PENCE - 1 PLAY) (BRITISH)
326-312-A	(1 DINAR - 2 PLAYS) (YUGOSLAVIA)
326-312-B	(50 PARA - 1 PLAY) (YUGOSLAVIA)
326-312-C	(1 DINAR - 1 PLAY) (YUGOSLAVIA)
326-313-A	(1 SPEL - 25¢) (HOLLAND)
326-313-B	(1 GULDEN) (4 SPELEN) (HOLLAND)
326-313-C	(1 GULDEN - 2 SPELER) (HOLLAND)
326-314-A	(2 x 1 SCHILLING - 1 PLAY) (AUSTRIA)
326-314-B	(5 SCHILLINGS - 3 PLAYS) (AUSTRIA)
326-315-A	(1 KRONA - 1 PLAY) (SWEDEN)
326-315-B	(1 KRONA - 2 PLAYERS) (SWEDISH)
326-316-A	(1 MARKKA - 1 PLAY) (FINLAND)
326-317-A	(1 ESCUDO - 1 PLAY) (PORTUGAL)
326-317-B	(5 ESCUDOS - 2 PLAYERS) (PORTUGAL)
326-318-A	(25 PIASTRES - 1 PLAY) (LEBANON)
326-318-B	(50 PIASTRES - 2 PLAYS) (LEBANON)
326-319-A	(25 CENTIMOS - 1 PLAY) (VENEZUELA)
326-320-A	(1 PESO - UN JUEGO) (MEXICO)
326-320-B	(2 x 1 PESO - UN JUEGO) (MEXICO)
326-321-A	(2 x 5 PESETAS - 2 PLAYERS) (SPAIN)
382-301-A	(1 QUARTER - 2 PLAYS)
382-301-B	(1 QUARTER - 3 PLAYS)
382-301-C	(1 DIME & 1 NICKEL - 1 PLAY)
382-301-D	(3 NICKELS - 1 PLAY)
382-301-E	(10¢ - 1 PLAY)
382-301-F	(2 NICKELS - 1 PLAY)

FLIPPER BUTTON & CREDIT BUTTON ASSEMBLY

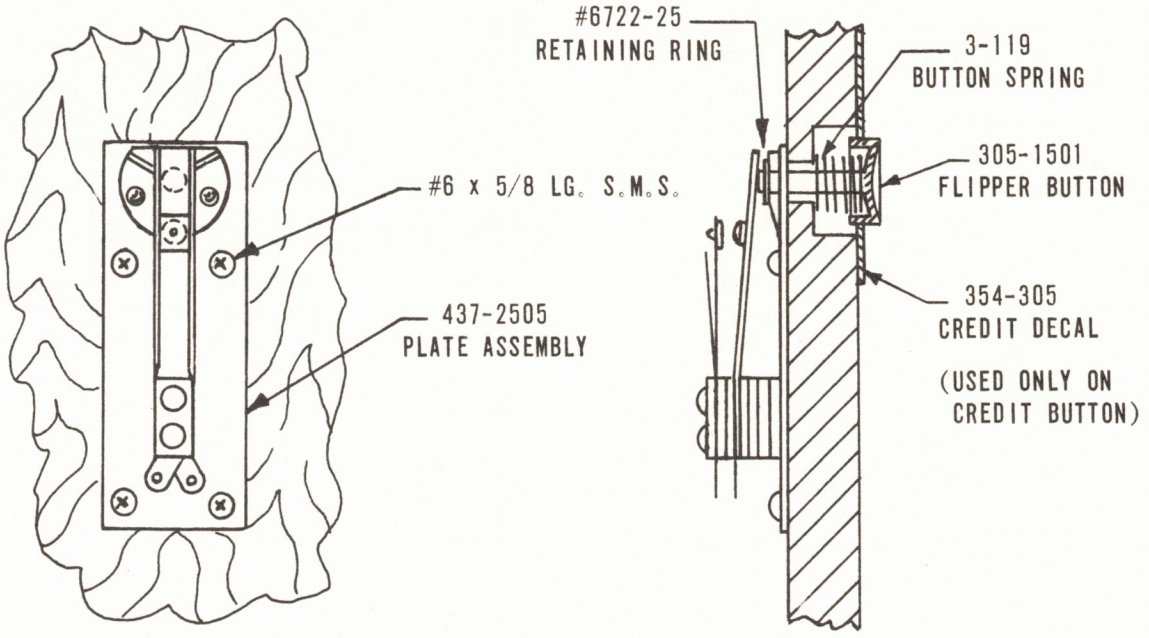

STERN
ELECTRONICS, INC.

STAMPEDE